

Geotech Sink Product Care and Cleaning Instructions

Your Caple sink is manufactured to the highest standards. To keep it in optimum condition always wipe the sink down with warm soapy water and a cloth after use, thoroughly drying it afterwards. This will remove general everyday dirt from your sink.

In hard water areas limescale deposits can build up on the sink over time. The limescale can become strongly coloured by such foods as coffee and red wine etc, we recommend the use of lemon juice or vinegar to remove this. Simply apply, leave for a few minutes, wipe with a cloth or Magic Eraser and rinse away with water. Drying the sink after use will help prevent the build up of scale left on the sink surfaces as water evaporates.

For further advise on cleaning products please visit www.caple.com or contact our Customer Service team on Tel: 0117 938 1900 or email: service@caple.co.uk

We recommend the use of baskets and chopping boards to reduce the risk of accidental damage.

You must not pour strong chemicals down the sink such as bleach, ammonia, caustic soda, white spirit and sterilising solutions. If this should accidentally happen, quickly wipe the spill away and rinse with plenty of water.

Avoid placing hot pans and trays directly on the sink surface, we recommend using a trivet or pot stand to help prevent any damage.

We do not recommend the use of a plastic washing up bowl, as particles of grit which may be impregnated in the base of the bowl could scratch surface of the sink.

We do not recommend chopping food directly on the sink surface, as this can cause damage. Wooden chopping boards are available for this purpose.

Avoid dropping sharp or heavy objects onto the sink as this may chip or crack the surface.

Leaving neat bleach in the sink can cause damage to all types of sinks. If neat bleach should come into contact with this product, please rinse thoroughly with warm soapy water.