

# RFF731 - Reversing the Door.

## FOLLOW THE STEPS BELOW:

1. Hold the top hinge cover and remove it toward that direction.



2. Disconnect the display connector. Unscrew the screws fixing the top hinge and remove it.



3. Displace the top door.



4. Unscrew the two screws fixing the middle hinge and remove it.



5. Displace the bottom door.



6. Unscrew the adjustable foot.



7. Unscrew the bottom hinge screws.



8. Unscrew the bottom hinge pin and screw it to other hole.



9. Screw the bottom hinge to the left bottom side of refrigerator. Screw the adjustable foot there.



10. Unscrew the two screws fixing stopper and stopper support plate under the cooler door. After that screw the other side [Fig 1].



11. Replace the top bushing and the top bushing cap at the bottom door [Fig 2].




12. Remove the support plastic and then metal stopper placed under the upper door [fig 3]. Then re screw these parts to the other side symmetrically. [Remember the screw for the metal part must be screwed to the hole which is closer to the bushing]. Do not use cordless screwdriver for these screws.





13. Remove the hinge cover on the top panel and replace to other side.



14. Remove the middle hinge cover and then screw the screw on the side panel [fig 4] and assemble to the right side panel [fig 5].

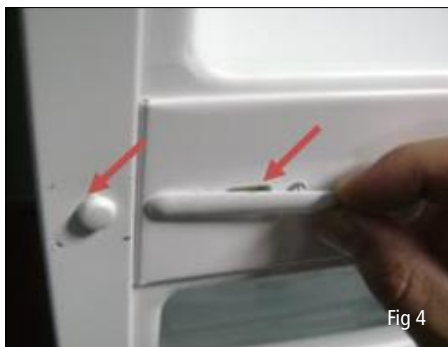


15. Place the bottom door [fig 6] and rotate the middle hinge by 180°. After that, Screw to the right side on the middle sheet [fig 7].

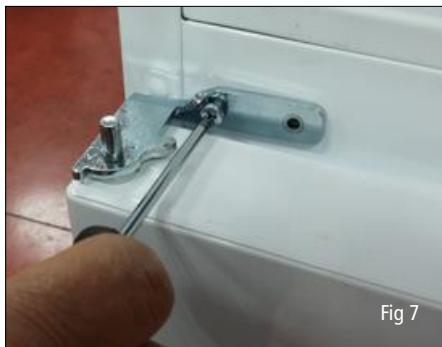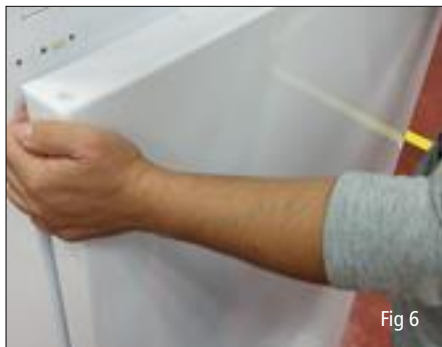

16. Remove the socket cover-right of the top door [Fig 8]  
Remove the display socket [Fig 9] Please use the socket cover to hidden other housing [Fig 10 / 11].



17. Place the top door to the middle hinge and then connect the display connector and screw the top hinge to the top panel.

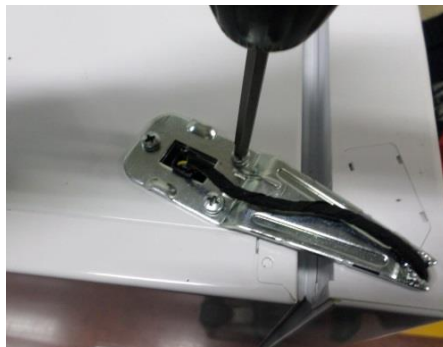

18. Place the top hinge cover

