

IMPORTANT:

The air fry tray can be used for normal fan heat, conventional cooking and grilling functions only. It must not be used for any microwave function.

If a microwave function is selected, ensure the air fry tray has been removed before the start.

WARNING:

Do not use the tray with any microwave function. This could damage the tray or even your microwave oven. The tray is for normal convection/fan cooking or grilling only.

