



Washing Machine Instruction Manual

WMF1100








Contact Caple on 0117 938 7420 for spare parts or www.caple.co.uk

CONTENTS

Warnings	3
Environmental Protection	15
Technical Fiche	15
Warranty	15
Technical Specification	16
Overview of Washing Machine	17
Installation	18
Installation Details	24
Quick User Guide	27
Control Panel Overview	39
Using Your Washing Machine	31
Operating Your Machine	34
Table of Programmes	40
Cleaning and Maintenance	46
Troubleshooting	52
Caple Contact Details	56

Keep these instructions for use with the appliance. If the appliance should be sold or passed on to others, make sure that the instructions are passed on with it. We thank you for taking note of these suggestions before installing and using the appliance. They have been written for your personal safety and the safety of others.

ICON	TYPE	MEANING
	WARNING	Serious injury or death risk
	RISK OF ELECTRIC SHOCK	Dangerous voltage risk
	FIRE	Warning; Risk of fire / flammable materials
	CAUTION	Injury or property damage risk
	IMPORTANT / NOTE	Operating the system correctly

SAFETY INSTRUCTIONS

Operating voltage / frequency	[220-240] V~/50Hz
Total current [A]	10
Water pressure [Mpa]	Maximum 1 Mpa / Minimum 0. 1Mpa
Total power [W]	2200
Maximum washing capacity [dry laundry] [kg]	10

- Do not install your machine on a carpet or a surface that would prevent the ventilation of its base.
- The appliance is not intended for use by people [including children] with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children of less than 3 years should be kept away unless continuously supervised.
- Call the Caple service centre for a replacement if the power cord malfunctions.
- Use only the new water inlet hose that is provided with your machine when connecting to water supply. Never use old, used or damaged water inlet hoses.
- Children should not play with the appliance.
- Cleaning and user maintenance should not be made by children without supervision.



NOTE:

For a soft copy of this user manual, please contact the following address: "enquiries@caple.co.uk". In your e-mail, please provide the model code [on the detergent drawer] and serial number which you can find on the appliance door porthole.

To ensure your safety and the safety of others, please read the following safety precautions before using or installing your washing machine.

Your washing machine is for domestic use only. Using it for commercial purposes will void your warranty.



WARNING:

The manufacturer is not responsible for any damage or injury if the safety instructions are not followed.

GENERAL SAFETY WARNINGS

- The necessary ambient temperature for operation of your Washing Machine is 15-25°C.
- Where the temperature is below 0°C, hoses may split or the electronic card may not operate correctly.
- Please ensure that garments loaded into your Washing Machine are free from foreign objects such as nails, needles, lighters and coins.
- **It is recommended that for your first wash, you select the 90° Cotton programme without laundry and half fill compartment II of the detergent drawer with a suitable detergent.**
- To avoid a buildup of detergent residue, only put softener or detergent in the drawer at the beginning of each wash.
- Unplug your Washing Machine and switch off the water supply if the Washing Machine is left unused for a long time. We also recommend that you leave the door open to prevent build up of humidity inside the Washing Machine.
- Some water may be left in your Washing Machine as a result of quality checks during production. This will not affect the operation of your Washing Machine.
- The packaging of the machine could be hazardous to children. Do not allow children to play with the packaging or small parts from the Washing Machine.

- Keep the packaging materials in a place where children cannot reach them, or dispose of them appropriately.
- Use pre-wash programmes only for very dirty laundry.
- ⚠ Never open the detergent drawer while the machine is running.
- In the event of a breakdown, unplug the machine from the mains supply and turn the water supply off. Do not attempt to carry out any repairs. Always contact an authorised service agent.
- Do not exceed the maximum load for the washing programme you have chosen.
- ⚠ Never force the door open when your Washing Machine is running.
- Washing laundry containing flour may damage your machine.
- Please follow the manufacturers' instructions regarding the use of fabric conditioner or any similar products that you intend to use in your Washing Machine.
- Make sure that the door of your Washing Machine is not restricted and can be opened fully.
- Install your machine in a location that can be fully ventilated and preferably has constant air circulation.

DOOR EMERGENCY OPENING FUNCTION


The door will remain locked when the machine is running, when the programme is not yet complete or in the event of a power cut.

To open the door;


1. Please turn off the machine. Remove the power plug from the mains socket.
2. To drain the waste water, follow the instructions given in cleaning the pump filter section.[*]
3. Pull down the emergency opening mechanism with the help of a tool and open the door at the same time. Ensure the water has been drained before opening the door.
4. If the door remains locked after being closed again, move the emergency opening handle to the open position.



[*] Remove the plinth to gain access to the emergency mechanism for your built-in machine. To remove the plinth part, please follow the Built-in Installation Manual instructions.

 **Read these warnings. Follow the advice given to protect yourself and others from risks and fatal injuries.**





RISK OF BURNS

 Do not touch the drain hose or any discharged water while your Washing Machine is running. The high temperatures involved pose a burn risk.



RISK OF DEATH FROM ELECTRICAL CURRENT

- Do not connect your Washing Machine to the mains electricity supply using an extension lead.
- Do not insert a damaged plug into a socket.
- Never remove the plug from the socket by pulling the cord. Always hold the plug.
- Never touch the power cord/plug with wet hands as this could cause a short circuit or electric shock.
- Do not touch your Washing Machine if your hands or feet are wet.
- A damaged power cord/plug can cause fire or give you an electric shock. When damaged it must be replaced, this should only be done by qualified personnel.

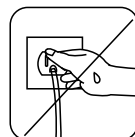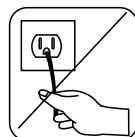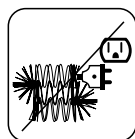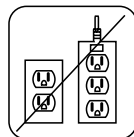

RISK OF FLOODING

- Check the speed of water flow before placing the drain hose in a sink.
- Take necessary measures to prevent the hose from slipping.
- Water flow may dislodge the hose if it is not properly secured. Make sure the plug in your sink does not block the plug hole.

DANGER OF FIRE

- Do not store flammable liquids near your machine
- The sulphur content of paint removers may cause corrosion. Never use paint removing materials in your machine.
- Never use products that contain solvents in your machine.
- Please ensure that garments loaded into your Washing Machine are free from foreign objects such as nails, needles, lighters and coins.

Risk of fire and explosion

RISK OF FALLING AND INJURY


- Do not climb on your Washing Machine.
- Make sure hoses and cables do not cause a trip hazard.
- Do not turn your Washing Machine upside down or on its side.
- Do not lift your Washing Machine using the door or detergent drawer.

 **The machine must be carried by at least 2 people.**



CHILD SAFETY

- Do not leave children unattended near the machine. Children might lock themselves in the machine resulting in risk of death.
- Do not allow children to touch the glass door during operation. The surface becomes extremely hot and may cause damage to skin.
- Keep packaging materials away from children.
- Poisoning and irritation may occur if detergent and cleaning materials are consumed or come into contact with the skin and eyes. Keep cleaning materials out of the reach of children.

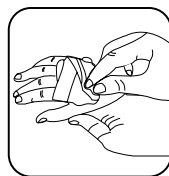

DURING USE

- Keep pets away from your machine.
- Please check the packaging of your machine before installation and the outer surface of the machine once the packaging has been removed. Do not operate the machine if it appears damaged or if the packaging has been opened.
- Your machine must only be installed by an authorised service agent. Installation by anyone other than an authorised agent may cause your warranty to be void.
- Children and persons with reduced physical, sensory or mental capabilities and lack of experience and knowledge should not use this appliance without supervision.
- Cleaning and user maintenance shall not be done by children without supervision.
- Only use your machine for laundry that is labelled as suitable for washing by the manufacturer.
- **Before operating the washing machine, remove the 4 transit bolts and rubber spacers from the rear of the machine. If the bolts are not removed they may cause heavy vibration, noise and malfunction of the machine and cause the guarantee to be void.**

**Replacement of drive belt, only by authorized service.
Only original spare belt must used.**

PACKAGING AND ENVIRONMENT

Removal of packaging materials

Packaging materials protect your machine from any damage that might occur during transportation. The packaging materials are environmentally friendly as they are recyclable. Use of recycled material reduces raw material consumption and decreases waste production.

EFFICIENT USE INFORMATION

Some important information to get the most efficient use out of your machine:

- Do not exceed the maximum load for the washing programme you have chosen. This will allow your machine to run in energy saving mode.
- Do not use the pre-wash feature for lightly soiled laundry. This will help you save on the amount of electricity and water consumed.

If the machine is Built-in;

- Built-in Machines must be used with a kitchen plinth.
- Please ensure you keep the plug accessible after the installation.

Please follow the Built-in Installation Manual instructions to use your Built-in Machine.



WARNING:

The manufacturer is not responsible for injuries or damage caused by improper installation or use.



ENVIRONMENTAL PROTECTION

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. This appliance is marked according to the European Directive on Waste Electrical and Electronic Equipment [WEEE].

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local council, your household waste disposal service or the retailer where you purchased the product.

CE DECLARATIONS OF CONFORMITY

This appliance has been manufactured to the strictest standards and complies with all applicable legislation, Low Voltage Directive [LVD] and Electromagnetic Compatibility [EMC].

UKCA DECLARATIONS OF CONFORMITY

This appliance has been manufactured to the strictest standards and complies with all applicable legislation.

TECHNICAL FICHE

This appliance conforms to all current and applicable energy regulations. To view the Technical Fiche that supports the energy labelling data, please visit the product page on our website www.caple.co.uk

WARRANTY

Your new appliance is covered by warranty. The warranty card is enclosed - if it is missing, you must provide the following information to your retailer in order to receive a replacement: date of purchase, model and serial number [placed on the inside of the appliance storage drawer]. Registration can also be completed online by visiting www.caple.co.uk.

Ensure you keep your warranty card safe, you may need to show it to Caple Service together with proof of purchase.






If you fail to show your warranty card you will incur all repair charges.

Spare parts are only available from Caple Service and spare parts authorised centres.

TECHNICAL SPECIFICATION

Operating voltage / frequency [V/Hz]	[220-240 V~/50Hz]
Total current [A]	10
Water pressure [Mpa]	Maximum: 1 Mpa Minimum : 0.1 Mpa
Total power [W]	2200
Maximum dry laundry capacity [kg]	10
Spinning revolution [rev / min]	1400
Programme number	15
Dimensions [mm] Height Width Depth	845 597 582

  
OVERVIEW OF WASHING MACHINE

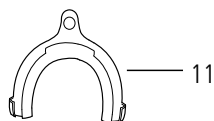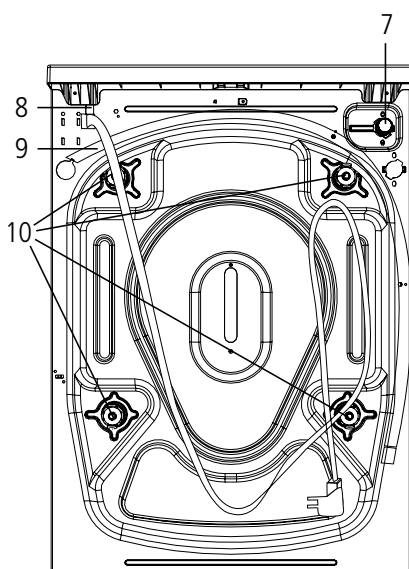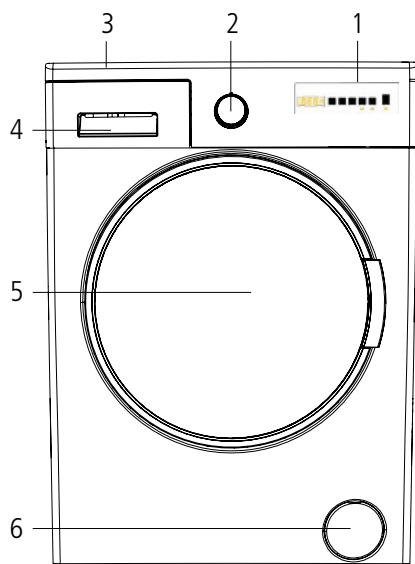

- | | |
|-----------------------|---|
| 1. Electronic Display | 5. Drum |
| 2. Programme Dial | 6. Pump Filter [behind plinth when installed] |
| 3. Upper Tray | 7. Water Inlet Valve |
| 4. Detergent Drawer | 8. Power Cable |
| | 9. Discharging Hose |
| | 10. Transit Bolts |
| | 11. Drain Hose Support |
| | 12. Blanking caps for transit bolts |
| | 13. Fluid detergent level plate |

INSTALLATION

REMOVING THE TRANSIT BOLTS

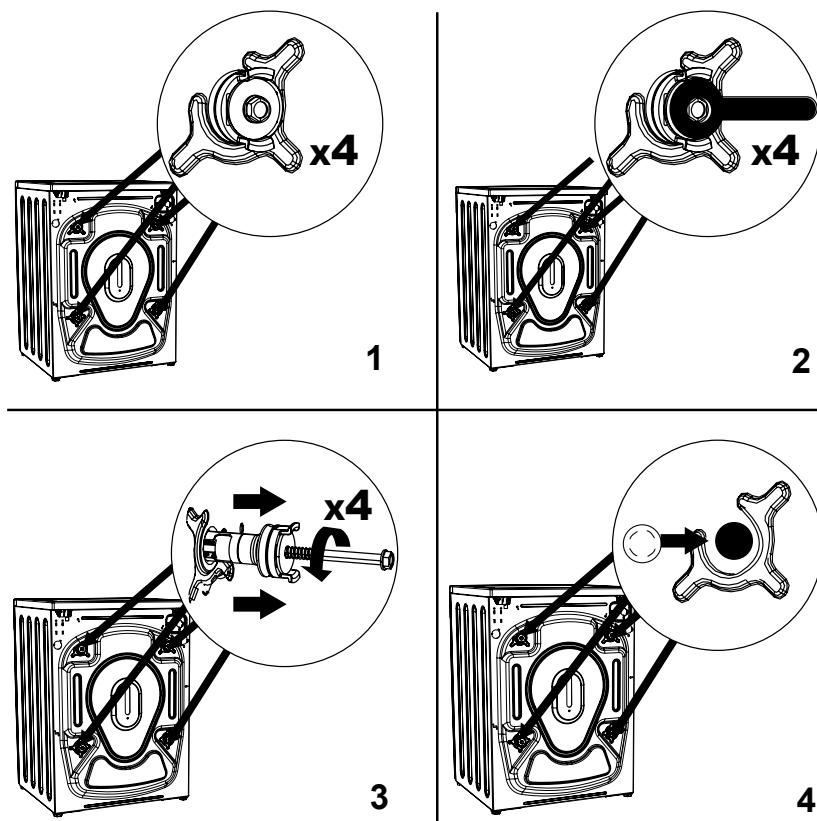


1. Before operating the washing machine, remove the 4 transit bolts and rubber spacers from the rear of the machine. If the bolts are not removed, they may cause heavy vibration, noise and malfunction of the machine and void the warranty.
2. Loosen the transit bolts by turning them anticlockwise with an appropriate spanner.
3. Remove the transit bolts with a straight pull.
4. Fit the plastic blanking caps supplied in the accessories bag into the gaps left by the removal of the transit bolts. The transit bolts should be stored for future use.


NOTE:

Remove the transit bolts before using the machine for the first time. Faults occurring due to the machine being operated with transit bolts fitted are out of the scope of the warranty.

During the removal of the bolts, spacer tubes fall inside the product. These can be removed by tilting the product forward and recovering them from the floor or inside the base of the machine.

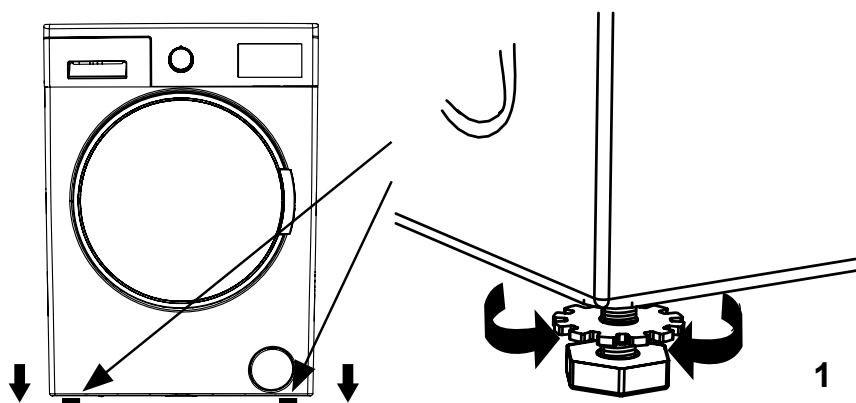
ADJUSTING THE FEET / ADJUSTING ADJUSTABLE STAYS

1. Do not install your machine on a surface [such as carpet] that would prevent ventilation at the base.
 - › To ensure quiet and vibration-free operation of your machine, install it on a firm surface.
 - › You can level your machine using the adjustable feet [using the appliance when the feet are not level can cause the furniture door to knock when in use].
 - › Loosen the plastic locking nut.

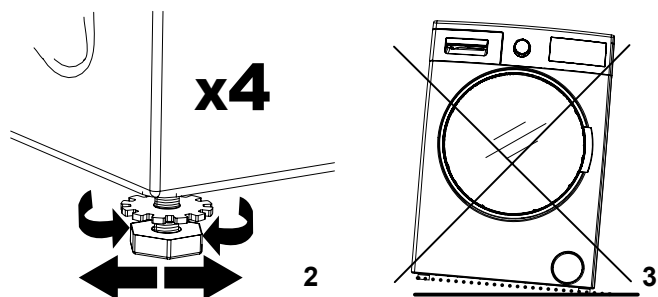

2. To increase the height of the machine, turn the feet clockwise. To decrease the height of the machine, turn the feet anticlockwise.
 - › Once the machine is level, tighten the locking nuts by turning them clockwise.
3. Never insert cardboard, wood or other similar materials under the machine to level it.
 - › When cleaning the ground on which the machine is located, take care not to disturb the level of the machine.

ELECTRICAL CONNECTION

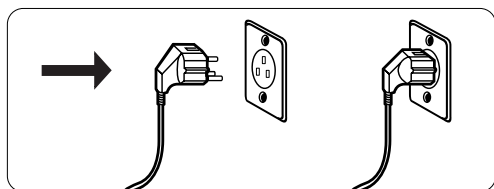


- › Your Washing Machine requires a 220- 240V, 50 mains supply.
- › The mains cord of your washing machine is equipped with an earthed plug. This plug should always be inserted to an earthed socket of 10 amps.
- › If you do not have a suitable socket and fuse conforming with this, please ensure the work is carried out by a qualified electrician.
- › We do not take responsibility for damage that occurs due to the use of ungrounded equipment.

NOTE:

Operating your machine with low voltage will cause the life cycle of your machine to be reduced and its performance to be restricted.

WATER INLET HOSE CONNECTION

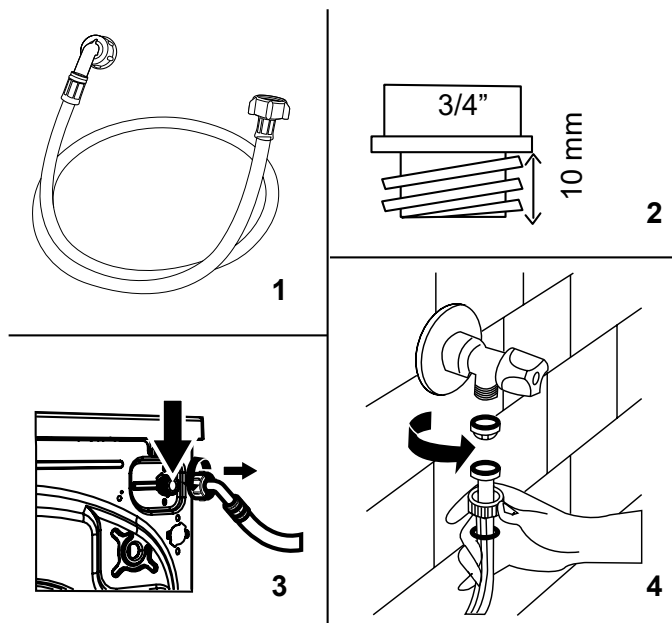


1. Your machine has a single water inlet connection [cold]. The white capped hose should be connected to cold water inlet.
 - › To prevent water leaks at the joints, either 1 or 2 nuts [depending on your machine's specifications] are supplied in the packaging with the hose. Fit these nuts to the end[s] of the water inlet hose that connect to the water supply.
2. Connect new water inlet hoses to a $\frac{3}{4}$ " , threaded tap.
 - › Connect the white capped end of the water inlet hose to the white water inlet valve on the rear side of the machine.
 - › Tighten the plastic parts of the connections by hand. If in any doubt, consult a qualified plumber.
 - › Water flow with pressure of 0. 1-1 Mpa will allow your machine to operate at optimum efficiency [pressure of 0. 1 Mpa means that more than 8 litres of water per minute will flow through a fully opened tap].

3. Once you have made all of the connections, carefully turn the water supply on and check for leaks.
4. Ensure that the new water inlet hoses are not trapped, kinked, twisted, folded or crushed.


NOTE:

Your Washing Machine must only be connected to your water supply using the supplied new fill hose. Old hoses must not be reused.

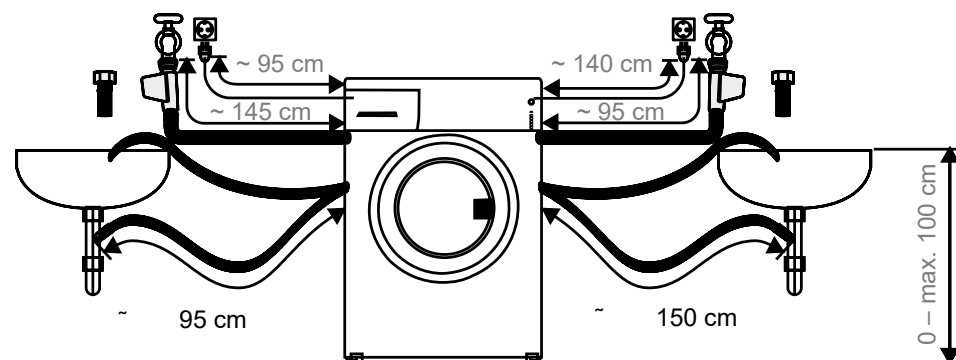

INSTALLATION DETAILS

DIMENSIONS

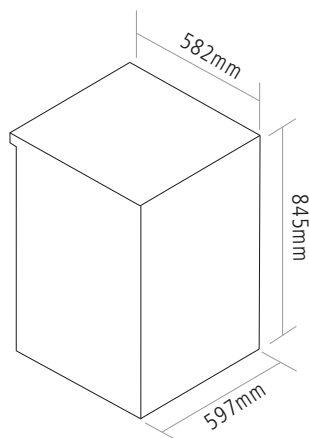

STACKING YOUR APPLIANCE


This washing machine can be combined with Caple tumble dryer TDF1100 in a washer-dryer stack. Caple stacking kit [STACKKIT] is available to purchase at www.caple.co.uk.

WARNING:

- › If the appliance is not correctly installed on the stacking kit, the appliance may fall.
- › Only stack your appliance using the Caple **STACKKIT**.
- › Do not install appliances from different manufacturers and with different dimensions in a washer-dryer stack.




WATER DISCHARGE CONNECTION

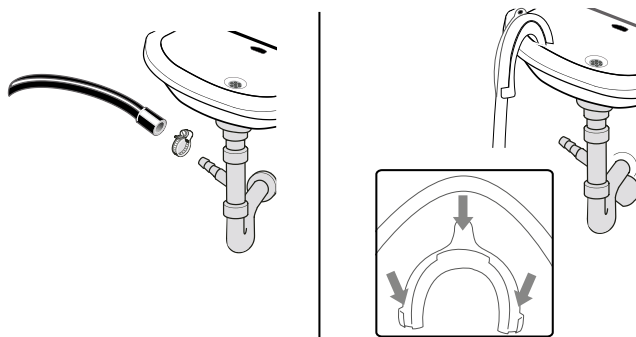

- › Connect the water drain hose to a standpipe or to the outlet elbow of a household sink, using additional equipment.
- › Never attempt to extend the water drain hose.
- › Do not put the water drain hose from your machine into a container, bucket or bathtub.
- › Make sure that the water drain hose is not bent, buckled, crushed or extended.
- › The water drain hose must be installed at a maximum height of 100 cm from the ground.

DETERGENT DRAWER

The detergent draw is split into 3 compartments:

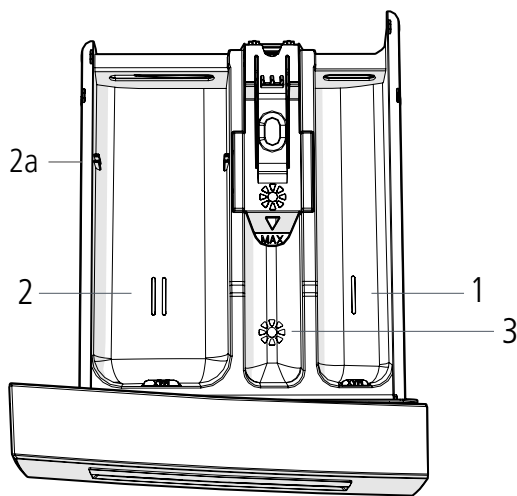


1. Pre-Wash Detergent Compartment:
This compartment should be used only when the pre-wash feature is selected. We recommend that the pre-wash feature is used only for very dirty laundry.
2. Main Wash Detergent Compartment: This is for liquid or powder detergents or limescale remover.
- 2a. This is the location of the slots that hold the fluid detergent level plate accessory in place. This accessory should be added to this compartment when using liquid detergent.
3. Softener Compartment: For softeners, conditioners or starch. Follow the instructions on the packaging. If softeners leave residue after use, try diluting them or using a liquid softener.

QUICK USER GUIDE


DESCRIPTION OF THE MACHINE

1. Electronic Display
2. Programme Dial
3. Upper Tray
4. Detergent Drawer
5. Drum
6. Pump Filter [behind plinth when installed]

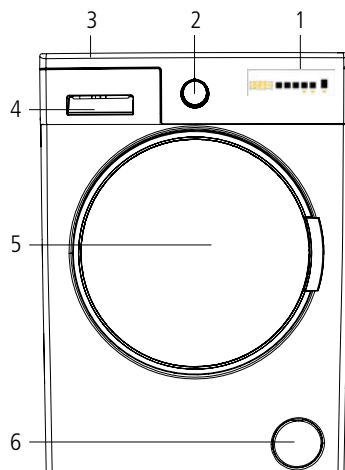

WASHING


- › Connect the washing machine to a power socket.
- › Open the water supply.

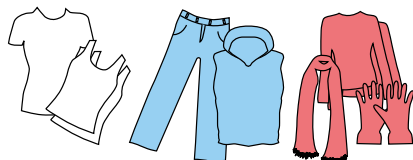

1. PREPARING YOUR LAUNDRY

Separate your laundry according to type [cotton, synthetic, sensitive, woollen, etc.], their temperature [cold, 30°, 40°, 60°, 90°] and degree of contamination [slightly stained, highly stained].


2. PLACING LAUNDRY INTO THE WASHING MACHINE

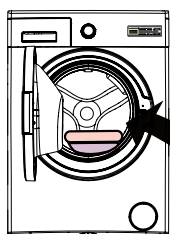

Open the door of your machine. Spread your laundry evenly in the drum.

3. PUTTING DETERGENT INTO THE WASHING MACHINE

1. Pre-washing compartment
2. Main washing compartment
3. Softener compartment

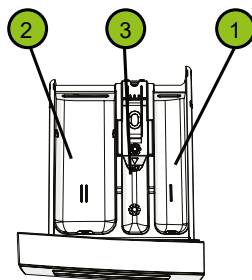

4. PROGRAMME SELECTION

Use the control knob to select the required programme. The knob can be rotated left or right to select the programme. Ensure that the programme knob is exactly on the programme you want to select.




5. ELECTRONIC DISPLAY


The display panel shows the washing delay timer [if set], temperature selection, spin speed, any additional functions selected. The display panel shows "End" when the selected programme is complete. The display panel also indicates if a fault has occurred with your

6. OPERATING YOUR MACHINE

1. Programme Dial
2. Electronic Display
3. Water Temperature Adjustment Button
4. RPM Speed Adjustment Button
5. Delayed Start Button
6. Rapid Wash Button
7. Easy Iron Button
8. Start/Pause Button
9. Operating Your Machine

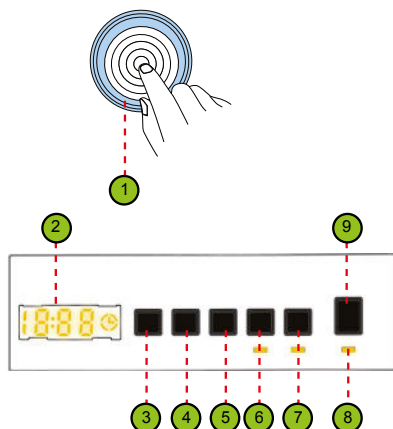


Press the Start/Pause button to start a selected programme or pause an active one.

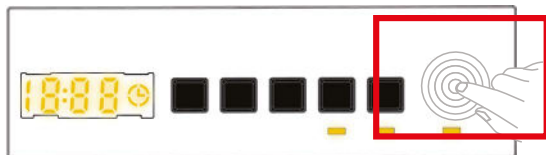

7. REMOVING LAUNDRY

Your machine will stop by itself as soon as the programme you have selected finishes.

"End" will flash on the electronic display and 3 tones will sound.

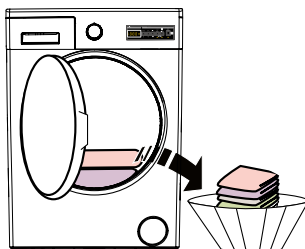

8. MAINTENANCE

1. It is recommended that you clean your pump filter once every 2 months.



2. It is recommended that you clean your detergent drawer once every 2 months.



3. It is recommended that you clean the filter on your water inlet valve once every 2 months.



4. Clean the filter at the end of the valve every 2 months.




If the washing machine does not spin, the unbalanced load system may have been activated.

The unbalanced load control system will try to distribute your laundry evenly to prevent damage to the drum.

The spinning operation will resume once the load has been evenly distributed.

CONTROL PANEL OVERVIEW

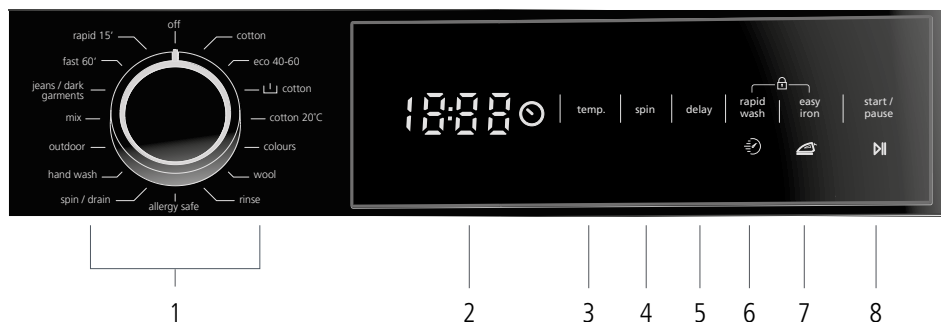

- | | |
|--|-------------------------|
| 1. Programme Dial | 5. Delayed Start Button |
| 2. Electronic Display | 6. Rapid Wash Button |
| 3. Water Temperature Adjustment Button | 7. Easy Iron Button |
| 4. RPM Speed Adjustment Button | 8. Start/Pause Button |

PROGRAMME DIAL


- › To select the desired programme, turn the programme dial either clockwise or anti-clockwise until the marker on the programme dial points to the chosen programme.
- › Make sure that the programme dial is set exactly to the programme you want.

ELECTRONIC DISPLAY

The display panel shows the washing delay timer [if set], temperature selection, spin speed, any additional functions selected. The display panel shows "End" when the selected programme is complete. The display panel also indicates if a fault has occurred with your machine.

USING YOUR WASHING MACHINE

PREPARING YOUR LAUNDRY

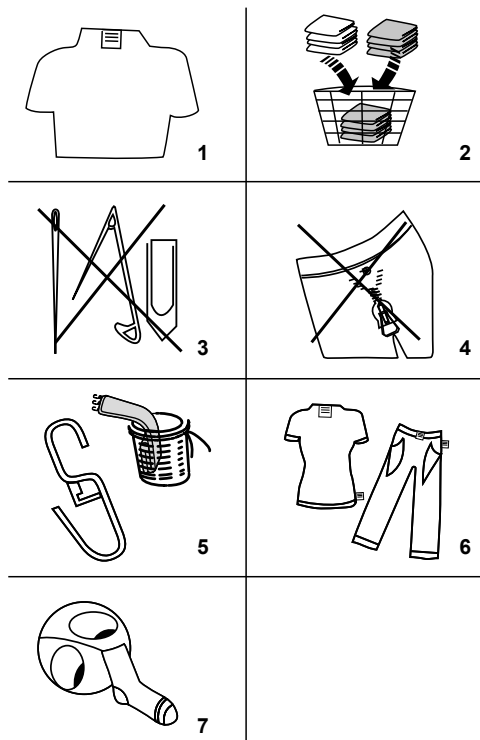




 
 
 









1. Follow the instructions given in the care labels on the clothing.
 - › Separate your laundry according to type [cotton, synthetic, sensitive, wool etc.], washing temperature [cold, 30°, 40°, 60°, 90°] and the degree of dirtiness [slightly stained, stained, highly stained].
2. Never wash coloured and white laundry together.
 - › Dark textiles may contain excess dye and should be washed separately.
3. Ensure that there are no metallic materials on your laundry or in the pockets; if so, remove them.





CAUTION:

Any malfunctions which occur due to foreign materials damaging your machine are not covered by the warranty.

4. Close zips and fasten any hooks and eyes.
5. Remove the metallic or plastic hooks off curtains or place them in a washing net or bag.
6. Turn garments inside out.
7. Wash socks, handkerchiefs and other small items in a washing net.

 Can be bleached	 Do not bleach	 Normal washing
 Maximum ironing temperature 150°C	 Maximum ironing temperature 200°C	 Do not iron
 Can be dry cleaned	 No dry cleaning	 Dry flat
 Drip dry	 Hang to dry	 Do not tumble dry
 Dry cleaning in gas oil, pure alcohol and R113 is allowed	 Perchloroethylene R11, R13, Petroleum	 Perchlorinetyhlene R11, R113, Gas oil

PUTTING LAUNDRY IN THE MACHINE

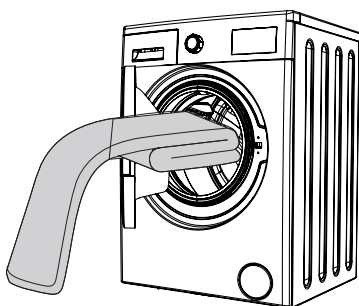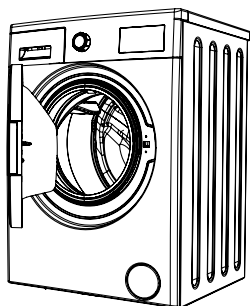

- › Open the door of your machine.
- › Spread your laundry evenly in the machine.


NOTE:

Take care not to exceed the maximum load of the drum as this will give poor wash results and cause creasing. Refer to the washing programme tables for information on load capacities.

The following table shows approximate weights of typical laundry items:

LAUNDRY TYPE	WEIGHT [GR]
TOWEL	200
LINEN	500
BATHROBE	1200
QUILT COVER	700
PILLOW SLIP	200
UNDERWEAR	100
TABLECLOTH	250

- › Load each item of laundry separately.
- › Check that no items of laundry are trapped between the rubber seal and the door.
- › Gently push the door until it clicks shut.

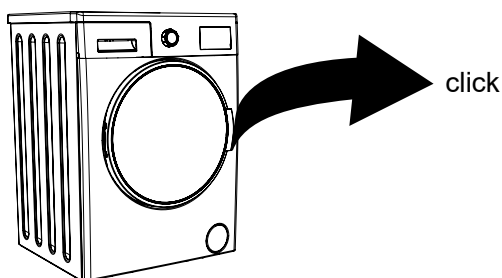


- › Make sure the door is fully closed, otherwise the programme will not start.

ADDING DETERGENT TO THE MACHINE

The amount of detergent you will need to put in your machine will depend on the following criteria:

- › If your clothes are only slightly soiled, do not pre-wash. Put a small amount of detergent [as specified by the manufacturer] into compartment II of the detergent drawer.
- › If your clothes are excessively soiled, select a programme with pre-wash and put $\frac{1}{4}$ of the detergent to be used into compartment I of the detergent drawer and the rest in compartment II.
- › Use detergents produced for automatic washing machines. Follow the manufacturer's instructions on the amount of detergent to use.
- › In areas of hard water, more detergent will be required.
- › The amount of the detergent required will increase with higher washing loads.
- › Put softener in the middle compartment of the detergent drawer. Do not exceed the MAX level.
- › Thick softeners may cause clogging of the drawer and should be diluted.

OPERATING YOUR MACHINE

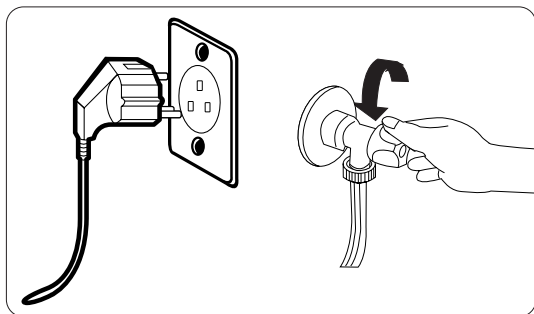

1. Plug your machine in to the mains supply.
2. Turn on the water supply.
 - › Open the machine door.
 - › Evenly spread your laundry in the machine.
 - › Gently push the door until it clicks shut.

SELECTING A PROGRAMME

Use the programme table to select the most appropriate programme for your laundry.

HALF-LOAD DETECTION SYSTEM

Your machine features a half-load detection system.

If you put less than half the maximum load of laundry into your machine it will automatically set the half-load function, regardless of the programme you selected.


This means that the selected programme will take less time to complete and will use less water and energy.

[*]Machinery specifications may vary depending on the product purchased.

ADDITIONAL FUNCTIONS

TEMPERATURE SELECTION


Use the washing water temperature adjustment button to alter the automatically programmed washing water temperature.

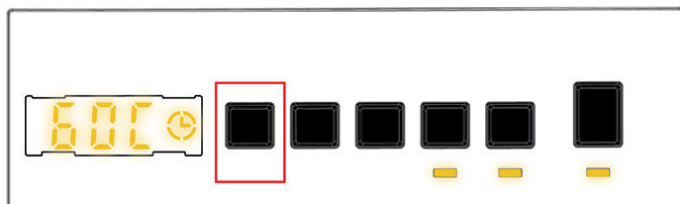

When you select a programme the maximum temperature for that programme is automatically selected. To adjust the temperature, press the water temperature adjustment button until the desired temperature is displayed on the digital display.

You can gradually decrease the washing water temperature between the maximum washing water temperature of the selected programme and cold washing [- - C] selections by pressing the temperature adjustment button.

SPIN SPEED SELECTION

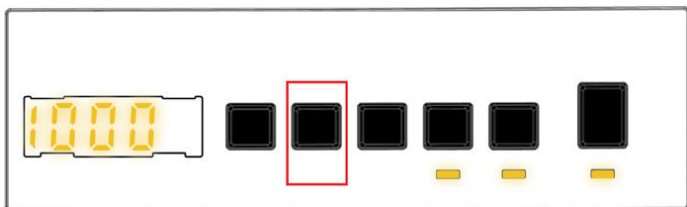


When you select a programme, the maximum spin speed is automatically selected.

To adjust the spin speed between the maximum spin speed and the cancel spinning option [- -], press the Spin speed button until the desired speed is displayed.

If you have skipped the spin speed you want to set, keep pressing the spin speed adjustment button until the desired spin speed is displayed again.

DELAY TIMER

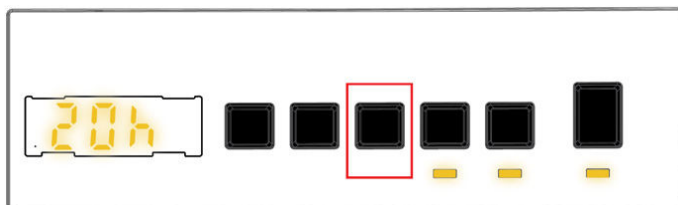

You can use this auxiliary function to delay the start time of the washing cycle for 1 to 23 hours.


To use the delay function:

- › Press the delay key once.
- › "01h" will be displayed. ⌚ will light up on the electronic display.
- › Press the delay key until you reach the time after which you want the machine to start the washing cycle.
- › If you have skipped the delay time you would like to set, you can keep pressing the delay key until you reach that time again.
- › To use the time delay function, you need to press the Start/Pause key to start the machine.
- › If you want to cancel the delay:
 - › If you have pressed the Start/Pause key to start the machine, you just need to press the delay key once. ⌚ will go off on the electronic display.
 - › If you have not pressed the Start/ Pause key, press the delay key continuously until ⌚ goes off on the electronic display. ⌚ will go off on the electronic display.

NOTE:


In the case that you want to select the auxiliary function feature, if the auxiliary function LED is not on, this means that this feature is not being used in the washing programme you have selected.

RAPID WASH

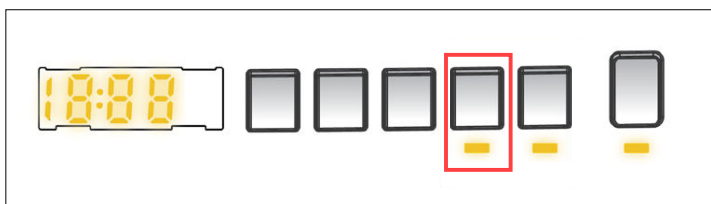


You can wash your laundry in a shorter time, using less energy and water by selecting this additional function.


We recommend that you only use this option if you are washing less than half the maximum dry load for the selected programme.

To select this function, press the Rapid wash button when the  symbol is displayed.


EASY IRON

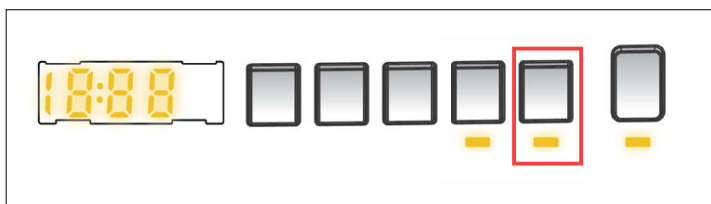


Using this function will result in your laundry being less wrinkled at the end of the selected washing programme.

To select this function, press the Easy ironing button when the  symbol is displayed.

NOTE:

If you put less than half the maximum load of laundry into your machine the half-load function will be automatically set, regardless of the programme you selected. This means that the selected programme will take less time to complete and will use less water and energy. When your machine detects half load, the  symbol is displayed automatically.

START/PAUSE BUTTON

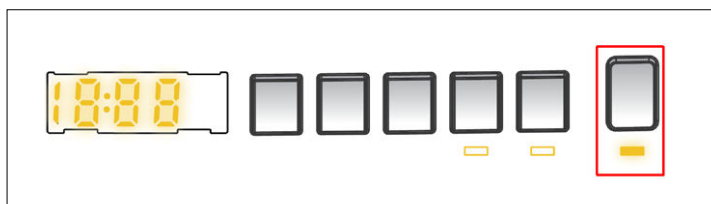


By pressing on the Start/Pause button, you may start the programme you have selected or suspend a running programme. If you switch your machine to select a programme [standby mode], the Start/Pause LED on the electronic display will blink until you start the programme.

CHILD LOCK

The Child Lock function allows you to lock the buttons so that the wash cycle you have chosen cannot be changed unintentionally.

To activate child lock, press and hold the rapid wash and easy iron buttons simultaneously for at least 3 seconds. "CL" will flash on the electronic display for 2 seconds when the child lock is activated.

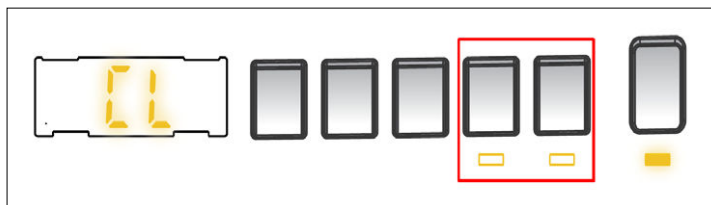

If any button is pressed or the selected programme is changed by the programme dial while the child lock is active, the "CL" symbol will flash on the electronic display for 2 seconds.

If the child lock function is active and a programme is running, when the programme dial is turned to the CANCEL position and another programme is selected the previously selected programme continues from where it was left.

To deactivate the child lock, press and hold the rapid wash and easy iron buttons simultaneously for at least 3 seconds until the "CL" symbol on the electronic display disappears.

NOTE:


Child lock will not automatically cancel after the programme has completed.

CANCELLING THE PROGRAMME

TO CANCEL A RUNNING PROGRAMME AT ANY TIME:

1. Turn the programme dial to the "OFF" position.
2. Your machine will stop the washing operation and the programme will be cancelled.
3. Turn the programme dial to any other programme to drain the machine.
4. Your machine will perform the necessary draining operation and cancel the programme.
5. You can now select and run a new programme.

PROGRAMME END

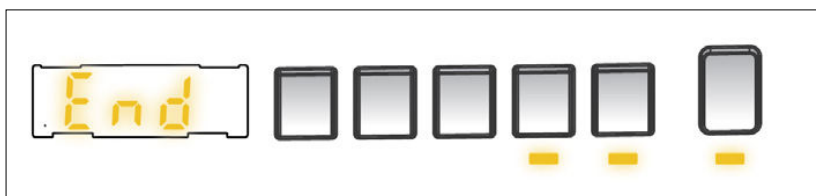

Your machine will stop by itself as soon as the programme you have selected finishes.

- › "END" will flash on the electronic display and 3 tones will sound.
- › You can open the machine's door and remove the laundry.
- › Leave the door of your machine open to allow the inner part of your machine to dry.
- › Switch the programme dial to the OFF position.
- › Unplug your machine.
- › Turn the water tap off.

TABLE OF PROGRAMMES

PROGRAMME	WASHING TEMPERATURE [°C]	MAXIMUM DRY LAUNDRY AMOUNT [KG]	DETERGENT COMPARTMENT	PROGRAMME DURATION [MIN.]	LAUNDRY TYPE / DESCRIPTIONS
Cotton	*60-90-80-70-40	10	2	145	Very dirty, cotton and flax textiles. [Underwear, linen, tablecloth, towel [maximum 4,0 kg], bedclothes, etc.]
Eco 40-60	*40 - 60	10	2	239	Dirty cotton and flax textiles. [Underwear, linen, tablecloth, towel [maximum 4,0 kg], bedclothes, etc.]
Cotton Pre-wash	*60 - 50 - 40 - 30 - "- -C"	10	1 & 2	164	Dirty cotton and flax textiles. [Underwear, linen, tablecloth, towel [maximum 4,0 kg], bedclothes, etc.]
Cotton 20	*20- "- -C"	5	2	59	Less dirty, cotton and linen textiles. [Underwear, bedsheet, tablecloth, towel [max. 2,0 kg] bedcloth, etc.]
Colours	*40 - 30 - "- -C"	10	2	130	Less dirty, cotton and linen textiles. [Underwear, bedsheet, tablecloth, towel [max. 4,0 kg] bedcloth, etc.]
Wool	*30 - "- -C"	2,5	2	48	Woollen laundries with machine wash labels.
Rinse	*"- -C"	10	-	30	Provides an additional rinse to any type of laundry after the washing cycle.
Allergy Safe	*60 - 50 - 40 - 30 - "- -C"	5	2	212	Baby laundry
Spin/ Drain	*"- -C"	10	-	17	You can use this programme for any type of laundry if you want an additional spin step after the washing cycle./ You can use the drain programme to drain the water accumulated inside the machine [adding or removing laundry]. To enable the drain programme, turn the programme knob to the spin/drain programme. After you select "spin cancelled" using the auxiliary function key, the program will start to run.
Hand Wash	*30 - "- -C"	2,5	2	90	Laundry recommended for hand wash or sensitive laundry.

PROGRAMME	WASHING TEMPERATURE [°C]	MAXIMUM DRY LAUNDRY AMOUNT [KG]	DETERGENT COMPARTMENT	PROGRAMME DURATION [MIN.]	LAUNDRY TYPE / DESCRIPTIONS
Easy Care / Outdoor	*40 - 30 - " - -C"	3,5	2	135	Very dirty or synthetic-mixed textiles. [Nylon socks, shirts, blouses, synthetic-including trousers etc.]
Duvet	*40 - 30 - " - -C"	3,5	2	105	For washing a fibre duvet with a machine washable label. [max. 2.5 kg]
Jeans / Dark Garments	*30 - " - -C"	3,5	2	96	Black and dark items made of cotton, mixed fibre or jeans. Wash inside out., Jeans often contains excess dye and may run during the first few washes. Wash light and dark coloured items separately.
[**] Fast 60' 60°C	*60 - 50 - 40 - 30 - " - -C"	4	2	60	Dirty, cotton, coloured and linen textiles washed at 60°C in 60 minutes.
[***] Rapid 15 min	*30 - " - -C"	2	2	15	In a short time of 15 minutes, Lightly soiled, cotton, colored and linen textiles your can wash.

NOTE:

PROGRAMME DURATION MAY CHANGE ACCORDING TO THE AMOUNT OF LAUNDRY, TAP WATER, AMBIENT TEMPERATURE AND SELECTED ADDITIONAL FUNCTIONS.

[*] Washing water temperature of the programme is the factory default.

[] If your machine has the rapid wash auxiliary function, you can enable the quick wash option on the display panel and load the machine with 2 kg or less laundry to wash it in 30 minutes.**

[*] Due to the short washing time of this programme, we recommend that less detergent is used. The programme may last longer than 15 minutes if your machine detects an uneven load. You can open the door of your machine 2 minutes after the completion of a washing operation. [The 2 minute period is not included in the programme duration].**

According to regulation 1015/2010 and 1061/2010, programmes 1 and 2 are respectively the 'Standard 60°C cotton programme' and the 'Standard 40°C cotton programme'.

The Eco 40-60 programme is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle, and that this programme is used to assess the compliance with the EU ecodesign legislation.

- › The most energy efficient programmes are generally those that run at a lower temperature and for a longer duration.
- › Only running the washing machine when it's loaded to the full capacity as indicated by the manufacturer will help to save both water and energy.
- › Programme duration, energy consumption and water consumption values may vary according to wash load weight and type, selected extra functions, water hardness and ambient temperature. According to the EU Ecodesign regulation the values given for programs other than the ECO 40-60 are indicative only.
- › It's recommended to use liquid detergent for the washing programmes at low temperature. The amount of detergent to be used may vary depending on the amount of laundry and the level of dirtiness of the laundry. Please follow the detergent manufacturers' recommendations for the amount of the detergent to be used.
- › The noise and remaining moisture content are influenced by the spinning speed. The higher spinning speed in the spinning phase, the higher noise and the lower remaining moisture content.
- › You can access the product database where the model information is stored by reading the QR code on the energy label.

PROGRAMME NAME	RATED CAPACITY KG	ENERGY CONSUMPTION KWH/CYCLE			PROGRAMME DURATION HOURS:MINUTES			WATER CONSUMPTION LITRES/CYCLE			MAX. TEMPERATURE °C			REMAINING MOISTURE CONTENT % 1400 RPM		
		Rated Capacity	1/2 Load	1/4 Load	Rated Capacity	1/2 Load	1/4 Load	Rated Capacity	1/2 Load	1/4 Load	Rated Capacity	1/2 Load	1/4 Load	Rated Capacity	1/2 Load	1/4 Load
Cotton 90	10	2,42			03:13			72			81			53%		
Cotton 60	10	0,9			02:25			50			50			53%		
Eco 40-60	10	1,03	0,37	0,25	03:59	03:00	03:00	59	45	43	41	26	23	53%	53%	53%
Easy Care / Outdoor	3,5	0,66			02:15			64			47			53%		
Fast 60	4	1,12			01:00			36			58			53%		
Cotton 20	5	0,14			00:59			34			20			53%		


IMPORTANT INFORMATION

- › Use detergents, softeners and other additives suitable for automatic washing machines only. Using too much detergent can cause excessive foam to occur. If foam occurs, the foam absorption system is activated.
- › We recommend that you fully clean the washing machine every two months. For periodic cleaning please use Drum Clean programme. If your machine does not have a Drum Clean programme, please use the Cottons-90 programme. When required, use limescale removers manufactured specifically for washing machines only.
- › Never force the door open when your Washing Machine is running. You can open the door of your machine 2 minutes after the completion of a wash cycle. *
- › Never force the door open when your Washing Machine is running. The door will open immediately after the washing cycle has ended. *
- › The installation and repairing procedures should always be carried out by the Authorised Service Agent in order to avoid possible risks. The manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorised persons.

[*] Specifications may vary depending on the machine purchased.

CLEANING AND MAINTENANCE

WARNING

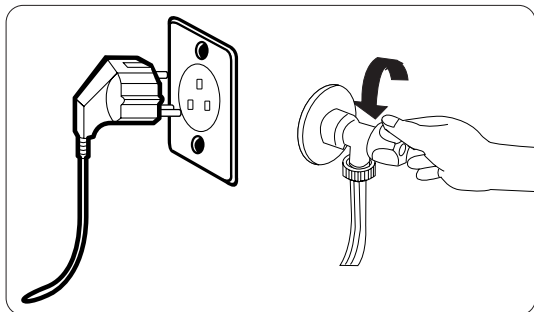

Turn your mains power supply off and remove the plug from the socket before carrying out maintenance and cleaning of your machine.

Turn off the water supply before starting maintenance and cleaning of your machine.




CAUTION:

Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaning agents to clean your Washing Machine. They may damage the plastic surfaces and other components with the chemicals they contain.

WATER INLET FILTERS

Water inlet filters prevent dirt and foreign materials from entering your machine. We recommend that these filters are cleaned when your machine is unable to receive sufficient water, although your water supply is on and the tap is open. We recommend that you clean your water inlet filters every 2 months.

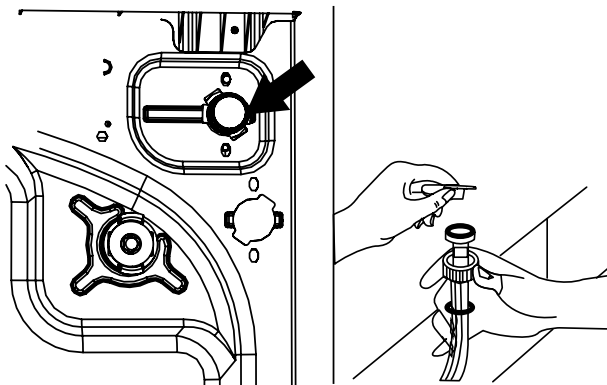


- › Unscrew the water inlet hose[s] from the Washing Machine.
- › To remove the water inlet filter from the water inlet valve, use a pair of long-nosed pliers to gently pull on the plastic bar in the filter.
- › A second water inlet filter is located in the tap end of the water inlet hose. To remove the second water inlet filter, use a pair of long-nosed pliers to gently pull on the plastic bar in the filter.
- › Clean the filter thoroughly with a soft brush and wash with soapy water and rinse thoroughly. Re-insert the filter by gently pushing it back into place.



CAUTION:

The filters at the water inlet valve may become clogged due to water quality or lack of required maintenance and may break down. This may cause a water leak. Any such breakdowns are out of the scope of the warranty.

PUMP FILTER

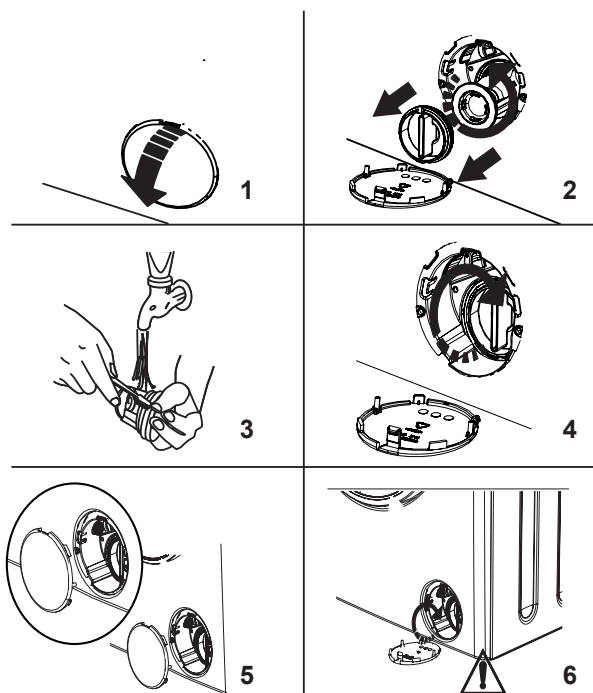

The pump filter system in your Washing Machine prolongs the life of the pump by preventing lint from entering your machine.

We recommend that you clean the pump filter every 2 months.

The pump filter is located behind the cover on the front-lower right corner.

To clean the pump filter:

1. Gently open the pump cover [**].
2. Before opening the filter cover, place a container under the filter cover to collect any water left in the machine.
3. Loosen the filter by turning it anticlockwise and remove by pulling. Wait for the water to drain.

NOTE:

Depending on the amount of water inside the machine, you may have to empty the water collection container a few times.

4. Remove any foreign materials from the filter with a soft brush.

5. After cleaning, re-fit the filter by inserting it and turning clockwise.
6. When closing the pump cover, ensure that the mountings inside the cover meet the holes on the front panel side.
7. Close the filter cover.



WARNING

The water in the pump may be hot, wait until it has cooled down before carrying out any cleaning or maintenance.

[*] Specifications may vary depending on the machine purchased.


[**] To remove the plinth, please follow the Built-in Installation Manual instructions.

DETERGENT DRAWER

The use of detergent may cause residual build up in the detergent drawer over time. We recommend that you remove the drawer every 2 months to clean the accumulated residue.


NOTE:

Images are for illustration only

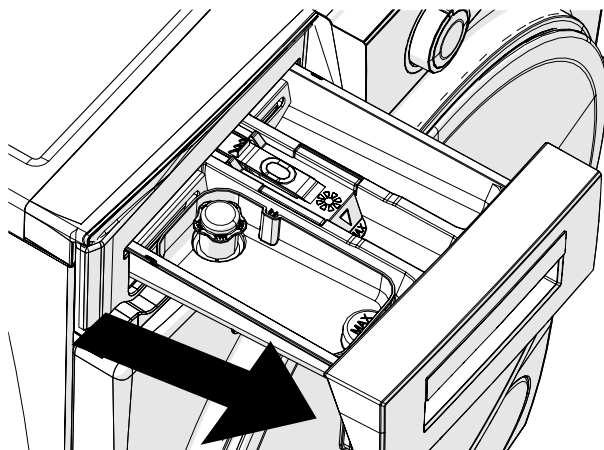


To remove the detergent drawer:

- › Pull the drawer forwards until it is fully extended.

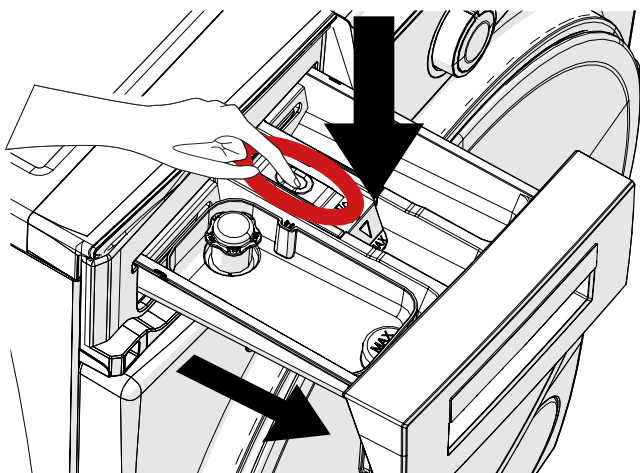

- › Press the region shown below inside the detergent drawer you have pulled all the way back, and continue pulling and remove the detergent drawer from its place.

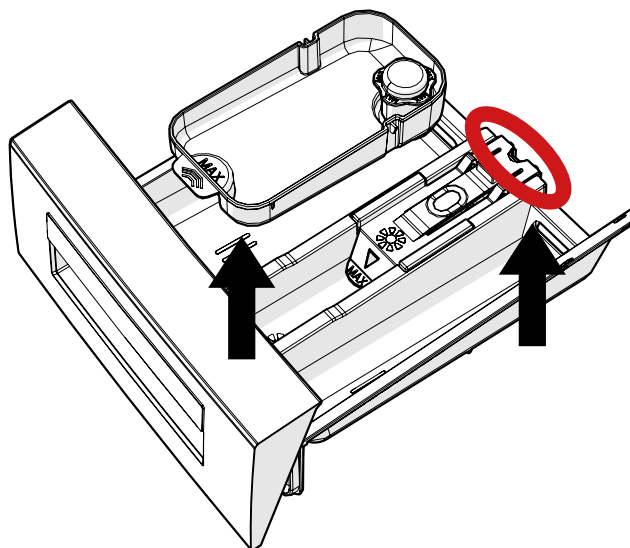



- › Remove the detergent drawer and disassemble the flush stopper. Clean thoroughly to completely remove any softener residue. Refit the flush stopper after cleaning and check that it is seated properly.

- › Rinse with a brush and lots of water.
- › Collect the residues inside the detergent drawer slot so that they don't fall inside your machine.
- › Dry the detergent drawer with a towel or dry cloth and place it back.



Do not wash your detergent drawer in a dishwasher.

BODY / DRUM

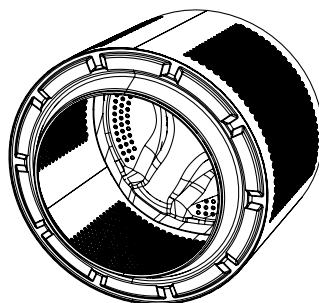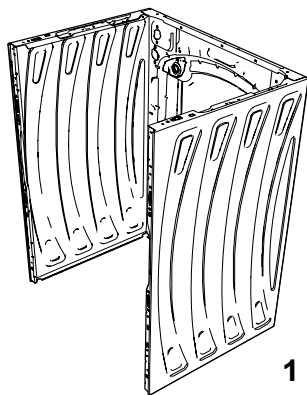

1. Body

Use a mild, non-abrasive cleaning agent, or soap and water, to clean the external casing. Wipe dry with a soft cloth.

2. Drum

Do not leave metallic objects such as needles, paper clips, coins etc. in your machine. These objects lead to the formation of rust stains in the drum. To clean such rust stains, use a non-chlorine cleaning agent and follow the instructions of manufacturer of the cleaning agent. Never use wire wool or similar hard objects for cleaning rust stains.

TROUBLESHOOTING

Repair of your machine should be carried out by an authorised service company. If your machine requires repair or if you cannot solve an issue with the information provided below, then you should:

- › Unplug your machine from the mains power supply.
- › Turn off the water supply and contact Caple Service, tel: **0117 938 7420**.

PROBLEM	POSSIBLE CAUSES	SOLUTION
Washing machine does not start up	Machine not plugged in.	Plug machine in.
	Fuses are faulty.	Replace the fuses.
	No mains power supply.	Check mains power.
	Start/Pause button not pressed.	Press the Start/Pause button.
	Programme dial 'stop' position.	Turn the programme dial to the desired position.
	The machine door is not completely closed.	Close the machine door.
Your machine does not intake water.	Water tap is turned off.	Turn tap on.
	Water inlet hose may be twisted	Check water inlet hose and untwist.
	Water inlet hose clogged.	Clean water inlet hose filters. [*]
	Inlet filter clogged.	Clean the inlet filters. [*]
	The machine door is not completely closed.	Close the machine door.
Your machine does not discharge water.	Drain hose clogged or twisted.	Check the drain hose, then either clean or untwist.
	Pump filter clogged.	Clean the pump filter. [*]
	Laundry is too tightly packed together in the drum.	Spread your laundry in the machine evenly.
Your machine vibrates.	The feet have not been adjusted.	Adjust the feet. [**]
	Transit bolts fitted for transportation have not been removed.	Remove the transit bolts from the machine. [**]
	Small load in the drum.	This will not prevent operation of your machine.
	Your machine is overloaded with laundry or laundry is unevenly spread.	Do not overload the drum. Spread laundry evenly in the drum.

PROBLEM	POSSIBLE CAUSES	SOLUTION
Excessive foam is formed in the detergent drawer.	Excessive amount of detergent used.	Press the Start/Pause button. To stop the foam, dilute one tablespoon of softener into 1/2 litre of water and pour into the detergent drawer. Press the Start/Pause button after 5-10 mins.
	Wrong detergent used.	Only use detergents produced for automatic Washing Machines.
Unsatisfactory washing result.	Your washing is too dirty for the programme selected.	Use the information in the programme tables to select the most appropriate programme.
	Amount of detergent used insufficient.	Use the amount of detergent as instructed on the packaging.
	There is too much laundry in your machine.	Check that the maximum capacity for the selected programme has not been exceeded.
Unsatisfactory washing result.	Hard water.	Increase the amount of detergent following the manufacturer's instructions.
	Your laundry is too tightly packed together in the drum.	Check that your laundry is spread out.
As soon as the machine is loaded with water, water discharges.	The end of water drain hose is too low for the machine.	Check that the drain hose is at a suitable height. [**] .
No water appears in the drum during washing.	No fault. Water is in the unseen part of the drum.
Laundry has detergent residue.	Non-dissolving particles of some detergents may appear on your laundry as white spots.	Perform an extra rinse, or clean your laundry with a brush after it dries.
Grey spots appear on the laundry.	There is untreated oil, cream or ointment on your laundry.	Use the amount of detergent as instructed on the packaging in the next wash.
The spin cycle does not take place or takes place later than expected.	No fault. The Unbalanced load control system has been activated.	The Unbalanced load control system will try to spread your laundry. The spinning cycle will begin once your laundry is spread. Load the drum evenly for the next wash.

[*] See the chapter regarding maintenance and cleaning of your machine.

[**] See the chapter regarding installation of your machine.

AUTOMATIC FAULT WARNINGS AND WHAT TO DO

Your Washing Machine is equipped with a built-in fault detection system, indicated by a combination of flashing wash operation lights. The most common failure codes are shown below.

TROUBLE CODE	POSSIBLE FAULT	WHAT TO DO
E01	The door of your machine is not shut properly.	Shut the door properly until you hear a click. If your machine persists to indicate fault, turn off your machine, unplug it and contact Caple Service.
E02	The water pressure or the water level inside the machine may be low.	Check the tap is fully turned on. Mains water may be cut-off. If the problem still continues, your machine will stop after a while automatically. Unplug the machine, turn off your tap and contact Caple Service.
E03	The pump is faulty or pump filter is clogged or electrical connection of the pump is faulty.	Clean the pump filter. If the problem persists, contact Caple Service. [*]
E04	Your machine has excessive amount of water.	Your machine will discharge water by itself. Once the water has drained, turn off your machine and unplug it. Turn off the tap and contact Caple Service.

[*] See the chapter regarding maintenance and cleaning of your machine.

The minimum period which spare parts must be supplied for a washer dryer is 10 years.



Caple Service
Fourth Way
Avonmouth
Bristol
BS11 8DW

T: 0117 938 1900
E: service@caple.co.uk
www.caple.co.uk