




## Lingfield Installation Guide

This sink has a lip that makes it suitable for installation in laminate worksurfaces. It is developed for installation with any worksurfaces (laminated or other material) which are 38-40mm thick. If used with a worktop thicker than 40mm a filler panel may be required between the base unit below and the sink.

1. Make a U-shaped cut in the worksurface using the below dimensions to allow the two sides and rear lip to sit on top of the worksurface:

**NOTE:** when fitted the front edge of the sink should be approx. 15mm forward of the front edge.

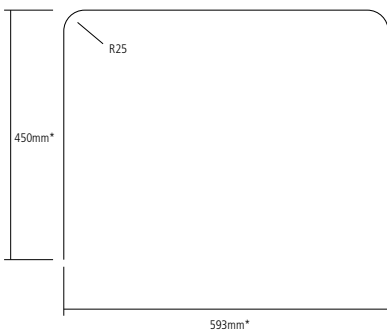

\* As the dimensions may vary plus or minus 2%, we strongly recommend using the sink for an accurate cut-out. For best results use a Guide Saw to make the cut-out.



Min. base unit 600mm

2. Apply silicone [or another waterproof sealant] to the cut edge of the work surface.
3. Apply a bead of silicone to the top of the worksurface, close to the edge of the cut-out.
4. Fit the overflow to the sink, but not the flexible hose which connects to the waste.
5. Inset the sink into the cut-out and neatly remove any excess silicone around the edges of the sink.
6. Apply white silicone into the gap between the front corners of the sink and the front edge of the worksurface.
7. Fit the waste and overflow hose.

