

# VERSE TECHNICAL GUIDE

03. BASE UNITS



08 UNDERCOUNTER APPLIANCES



**10.** BASE UNITS Fitting Guide



12. WALL UNITS



14 TALL UNITS

Vertical Double Profile



16. TALL UNITS

Vertical Single Profile



18. VERTICAL RAIL Fitting Guide



20. VERTICAL RAIL Appliance Fillers




22 contact







#### 1. TOP-RAIL

- > Top-rail profile for base units [NGPTOP\*\*]
- › Length available;
- 4100mm for standard finishes, 3000mm for bespoke painted finishes.
- Can be cut to size on site using a circular chop saw.
- Secure to base units using fixing brackets.Supplied in pairs [NGPFIXB].
- › Base cabinets are supplied routered to accommodate the rail.
- If you have an extended run, use an in-line fixing connector [NGPILCON].

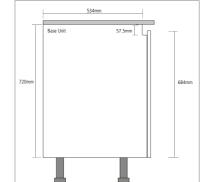



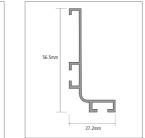




#### 2. TOP-RAIL END CAPS

- > Caps to be used with the top-rail to finish against a wall, end panel or appliance.
- > Supplied in pairs [NGPTOPCAP\*\*]
- > Colour co-ordinated to top-rail.



#### 3. TOP-RAIL EXTERNAL CORNER


- Use with the top-rail when running the rail around corners on the end of a base unit run or on an island.
- For use in conjunction with external corner posts or mitred island end panels.
- > Supplied singularly [NGPTOPEXT\*\*]
- > Colour co-ordinated to the top rail profile.

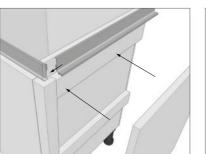



## 4. TOP-RAIL INTERNAL CORNER

- Use with the top-rail to run the rail around corner base units [suitable with both conventional and 'L' shape corner bases].
- > Supplied singularly [NGPTOPINT\*\*]
- Colour co-ordinated to the top rail profile.

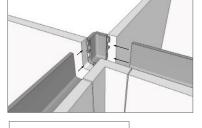



**NOTE** \*\* Refers to rail colour.


 $\mathbf{4}$ 




#### 5. MID-RAIL


- Mid-rail profile for use with base unit drawer packs [NGPMID\*\*].
- Lengths available;4100mm for standard finishes3000mm for bespoke painted finishes.
- > Can be cut to size on site using a circular shop saw.
- Secure to the base units using fixing brackets.
   Supplied in pairs [NGPFIXB].
- Base drawer cabinets supplied routered to accommodate the rail.
- If you have an extended run, use an in-line fixing connector [NGPILCON].



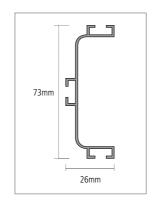

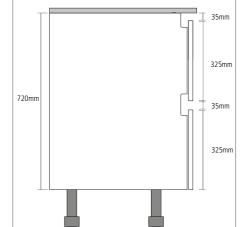

2 X DRAWER BASE

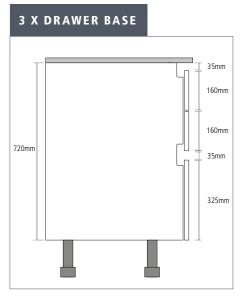

#### 6. MID-RAIL END CAPS

- Use with the mid-rail to finish against a wall, end panel, appliance or high-line base unit.
- > Supplied in pairs [NGPMIDCAP\*\*]
- > Colour co-ordinated to the mid-rail profile.



# 7. IN-LINE CONNECTOR

 Use to connect the top-rail or mid-rail sections when the run exceeds the maximum rail length [NGPILCON].



NOTE \*\* Refers to rail colour.

 $\mathbf{6}$ 




#### SINGLE OVEN HOUSING

- Top-rail cannot be fitted above a single oven in a base unit, or above a built-under double oven.
- Use end caps [NGPTOPCAP\*\*] to finish the top-rail on either side of the appliance.
- Use end caps [NGPMIDCAP\*\*] to finish the mid-rail on either side of the appliance.



#### DISHWASHER + REFRIGERATION HOUSING

- To fit appliances below the top-rail the appliance height must be checked carefully before ordering.
- The distance below the top-rail to the floor is 812mm.
- Plinth height can be raised to 155mm in order to accommodate appliances up to 817mm high.
- When appliances cannot fit below the top-rail [including free-standing appliances] we recommend fitting base panels either side of the appliance and terminating the top-rail on each side.
- [Note: a full height 715mm door will need to be ordered when installing in this way].

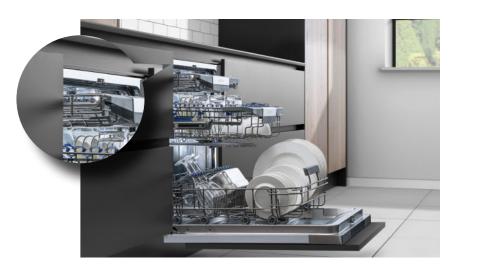

NOTE \*\* Refers to rail colour.







## STEP TWO

## STEP THREE


Insert the dowelled fixing bracket [NGPFIXB] into the pre-drilled unit side gable and screw into place.

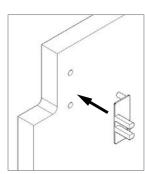

> Slide the locking devices onto the rail.

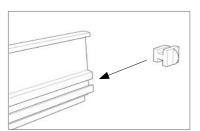


Sit the rail onto the routered gable end and rotate the locking device into the fixing bracket.

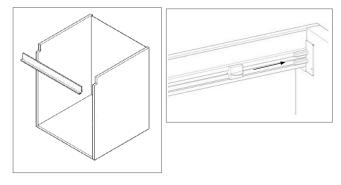

## STEP FOUR

# STEP FIVE


> The rail is now secured in place.

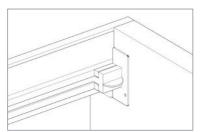

> Fit end caps if required.

# NOTE:

1mm spacing must be taken into account when cutting down the rail.

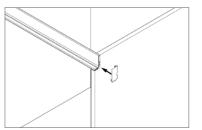

[NGPFIXB]



## WALL UNITS

- > Wall profile for all wall units [NGPWALL\*\*]
- Lengths available;3900mm for standard finishes,3000mm for bespoke painted finishes.
- Can be cut to size on site using a circular chop saw.
- Wall carcases are suvvpplied routered and notched to accommodate the wall profile.
- No fixings required profile slots directly into the carcase [clear silicone adhesive should be used to bind the rail with the panel].
- Note that wall profiles must be mitred for corner wall units [no internal corner connectors are available for wall profiles].
- Plant-on end panels must be fitted to all wall unit end runs due to the carcase side gables being notched for the rail.




NOTE \*\* Refers to rail colour.




#### VERTICAL DOUBLE RAIL PROFILE

- Vertical double rail profile is used for fitting onto tall units when two opening doors meet.
- > Lengths 2250mm [NGPVD\*\*]
- Can be cut to size on site using a circular chop saw.
- Secure to the tall units using fixing brackets.4 provided per rail [NGPFIXVD].
- Tall unit gables are supplied routered to accept the vertical rail.
- Tall units will then have a 30mm space between each unit to allow for the vertical rail.
- Specify left-hand hinged [L] or right-hand hinged [R] option when ordering tall units. If a vertical profile is to be fitted on both sides of a tall housing then a double-handed [D] option should be specified [see illustration].



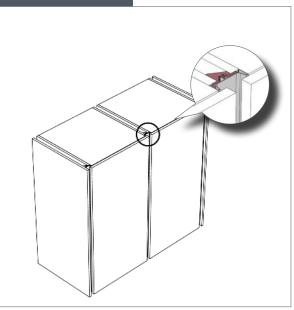

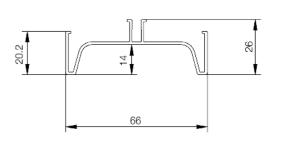



011110


NOTE \*\* Refers to rail colour.




#### VERTICAL SINGLE RAIL PROFILE

- Vertical single rail profile is used for fitting onto tall units when you have an opening door on one side only. It can also be used to end a run when an end panel is fitted.
- > Lengths 2250mm [NGPVS\*\*]
- Can be cut to size on site using a circular chop saw.
- Secure to the tall units using fixing brackets.4 provided per rail [NGPFIXVS].
- Tall unit gables are supplied routered to accept the vertical rail.
- Tall units will then have a 30mm space between each unit or end panel to allow for the vertical rail.
- Specify left-hand hinged [L] or right-hand hinged [R] option when ordering tall units [see illustration].



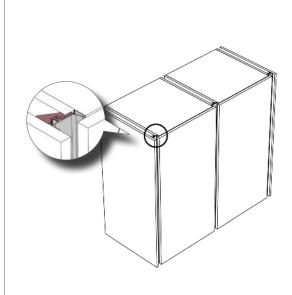

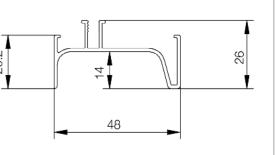




NOTE \*\* Refers to rail colour.





STEP TWO STEP ONE

> Attach the fixing brackets [NGPFIXVBKT] to the back of edge of the carcase and adjacent carcase gable/side panel ensuring they are flush with the back edge.

> Secure the tall gola fixing brackets in place. Four provided per rail. Single vertical brackets [NGPFIXVS] or double vertical brackets [NGPFIXVD]. Place the cabinets into position and clip the vertical rail into place.

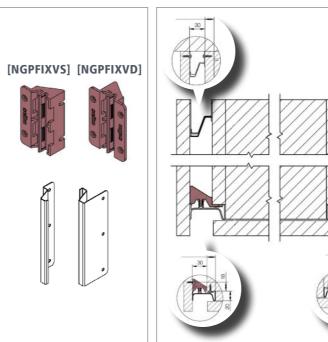

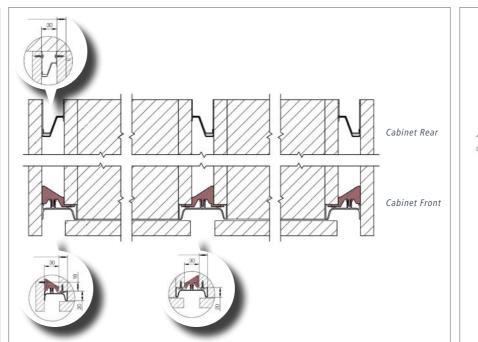


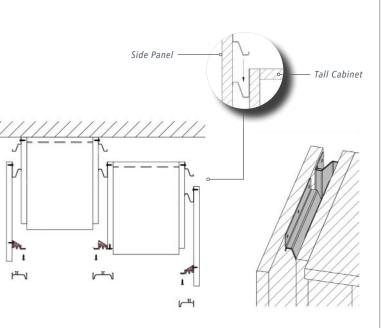




## VERTICAL RAIL APPLIANCE FILLERS

- > Fillers for use behind appliances to fill the void in the vertical profile.
- > For appliances less than 600mm, the filler will overhang
- > 580mm single oven filler [NGPAF580\*\*].
- > Colour co-ordinated to the vertical rail profile.

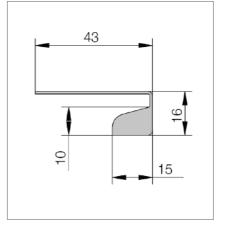

## STEP ONE


> Fix the filler in position with woodscrews.

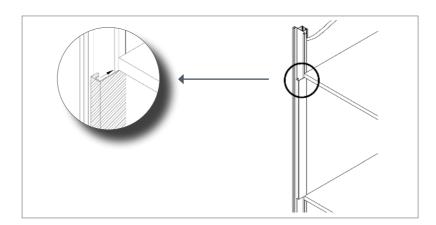

NOTE \*\* Refers to rail colour.

## STEP TWO

> Fit the appliance into place. You may have to drill through the appliance filler if the appliance requires a screw fixing into the cabinet.

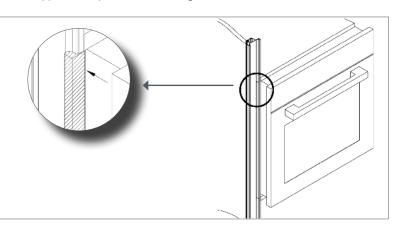



t: 0117 938 1900 f: 0800 373 163

e: furniture@caple.co.uk

BS11 8DW w: caple.co.uk





