



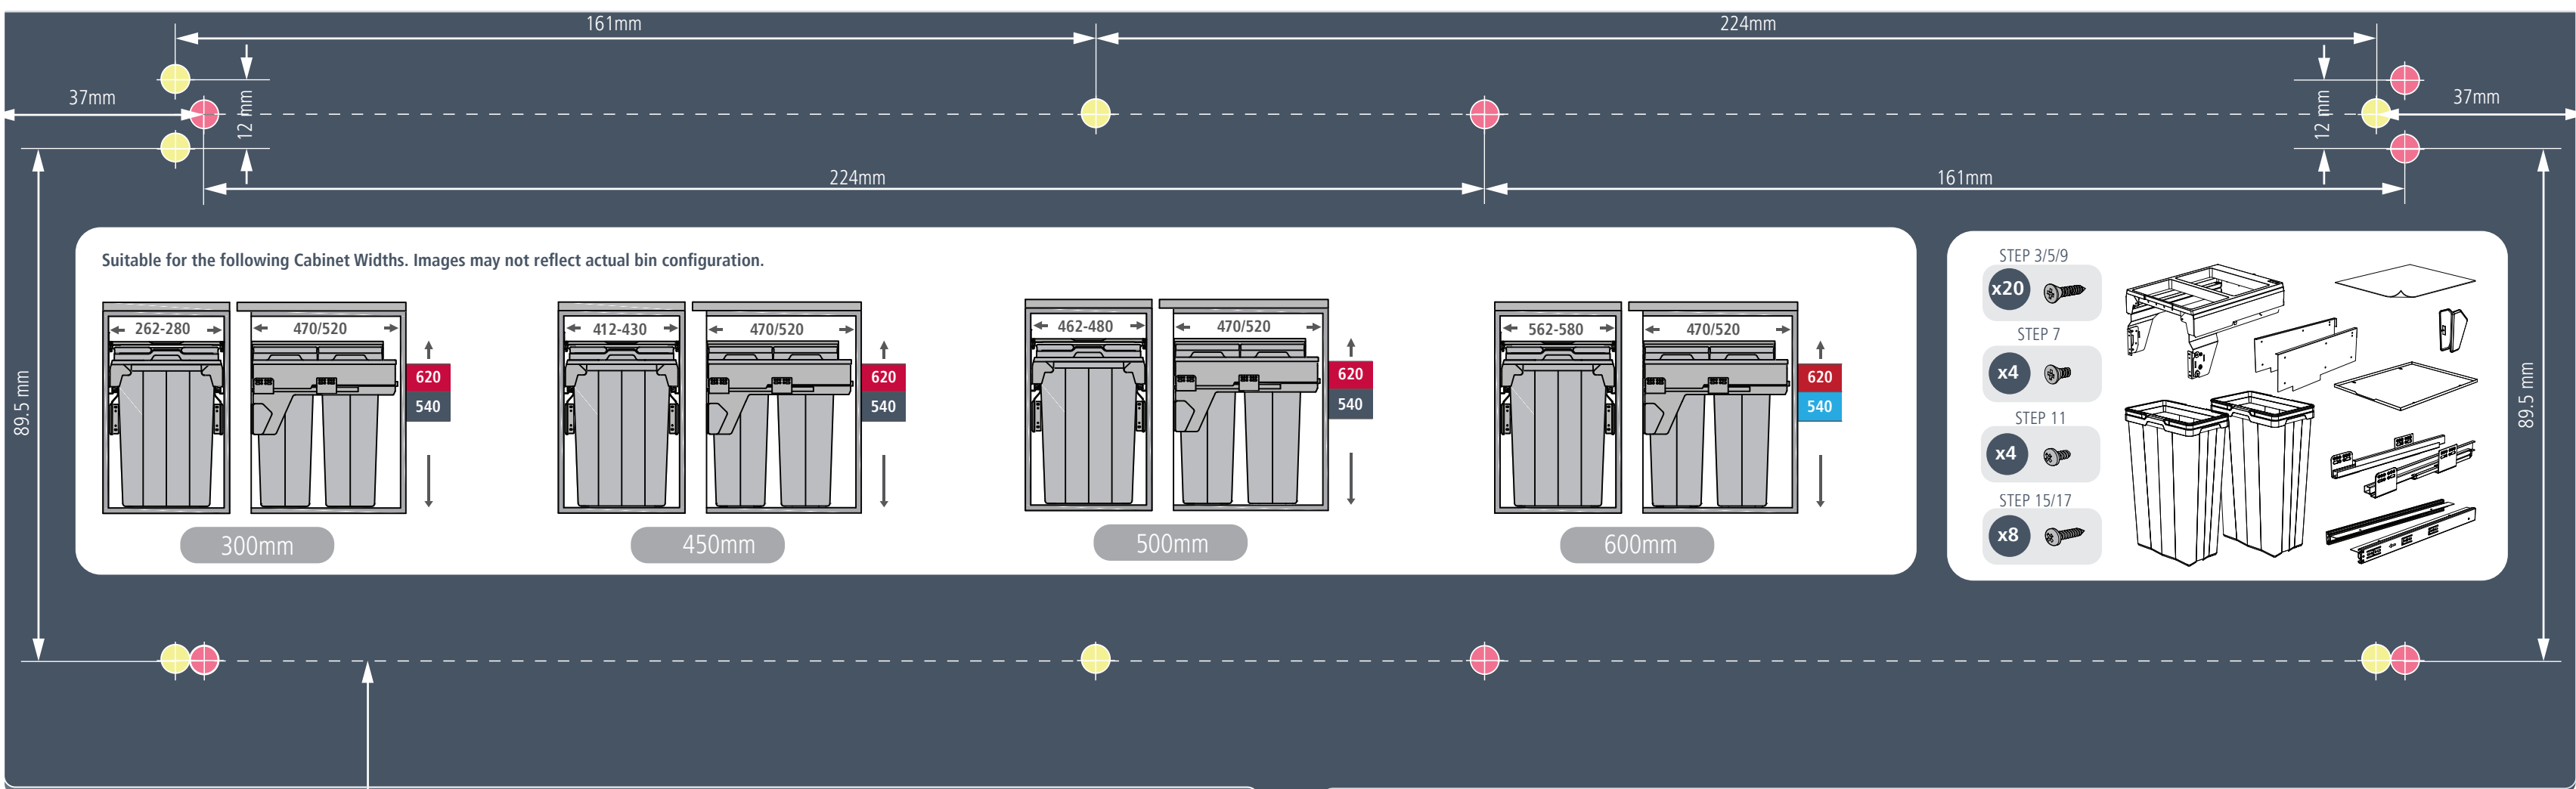


SCAN FOR
INSTALLATION
VIDEO

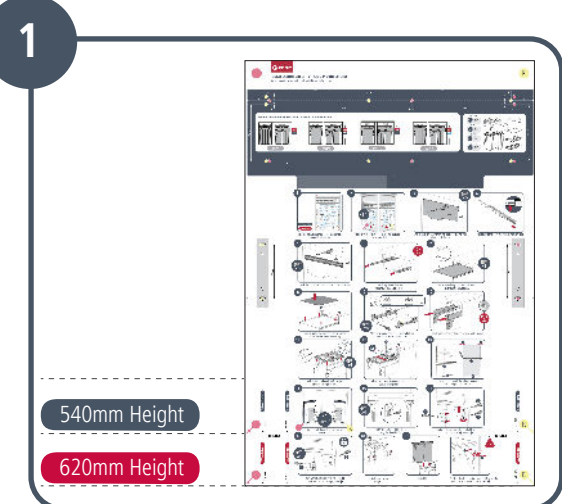


Fold the instruction sheet to the appropriate product height option.




Measure from bottom edge of cabinet and use template to mark holes

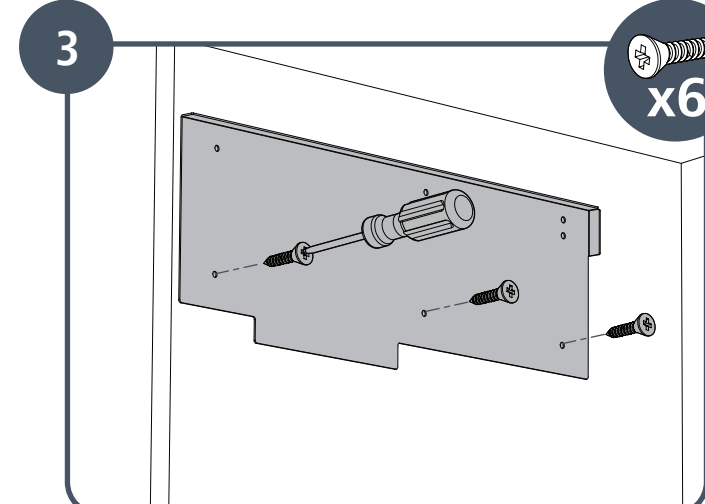


Attach both left and right metal plates to cabinet wall using supplied screws.

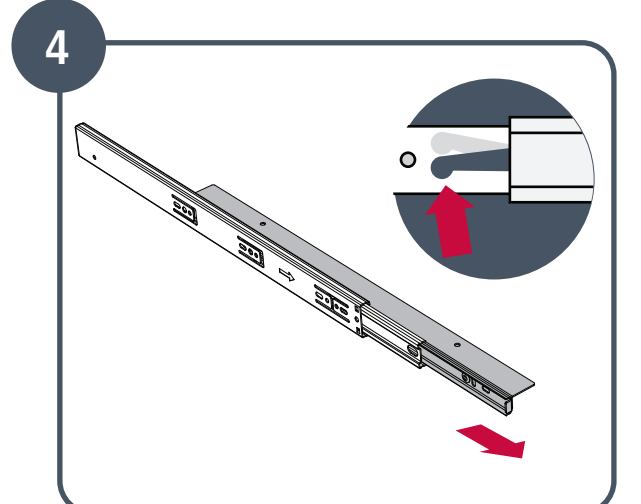


Release left and right tray runners from bracket.

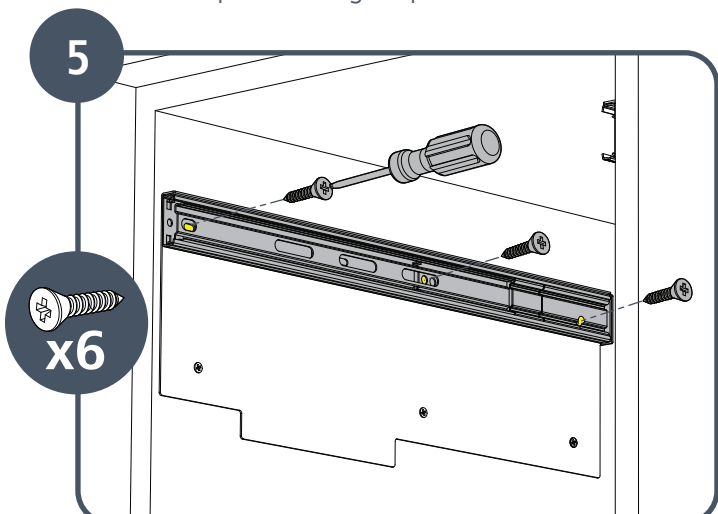


Install the top runners with another 6 bracket screws.

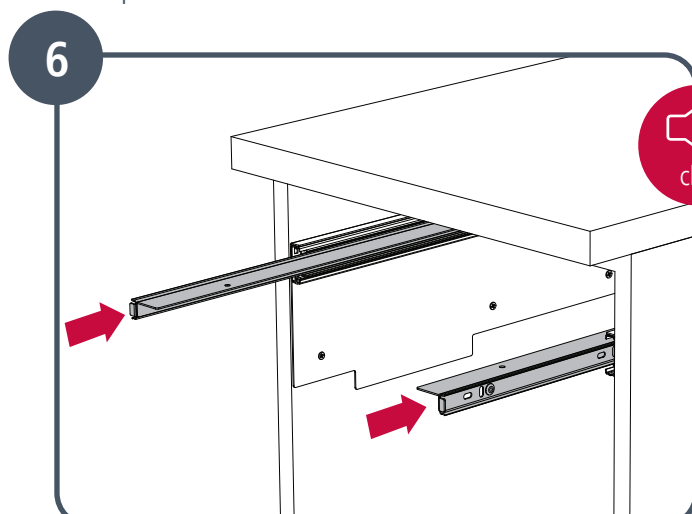


Install top runner brackets. You should hear a click sound.

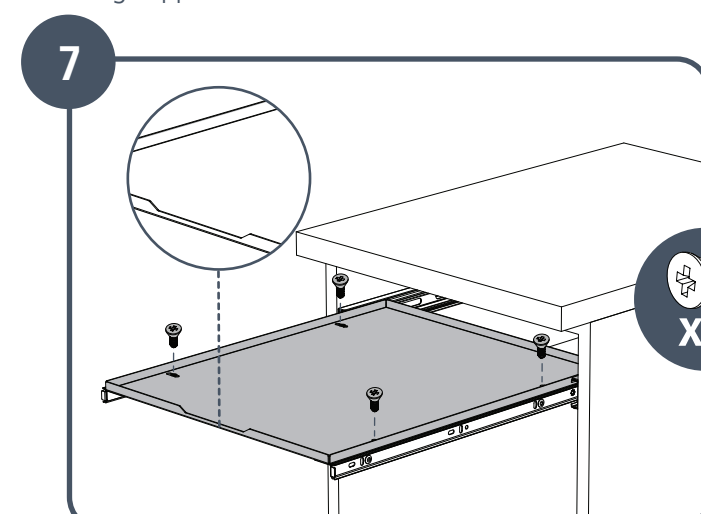


Install metal tray loosely with screws, allowing for adjustment.

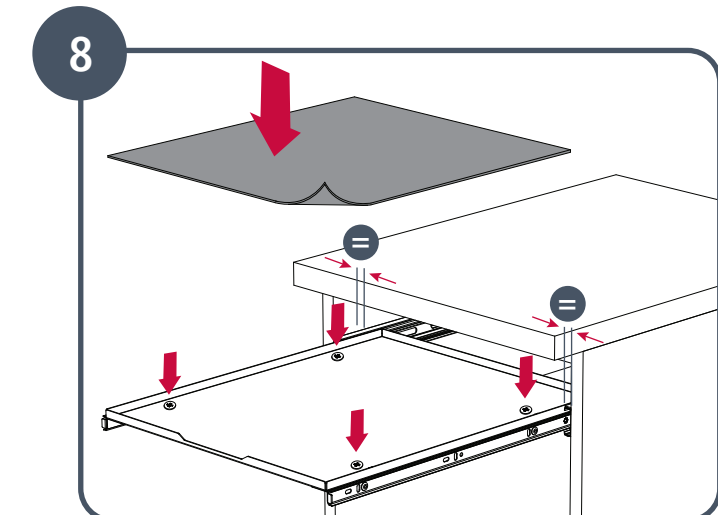


Adjust metal tray position, tighten screws when parallel. Place mat on top.

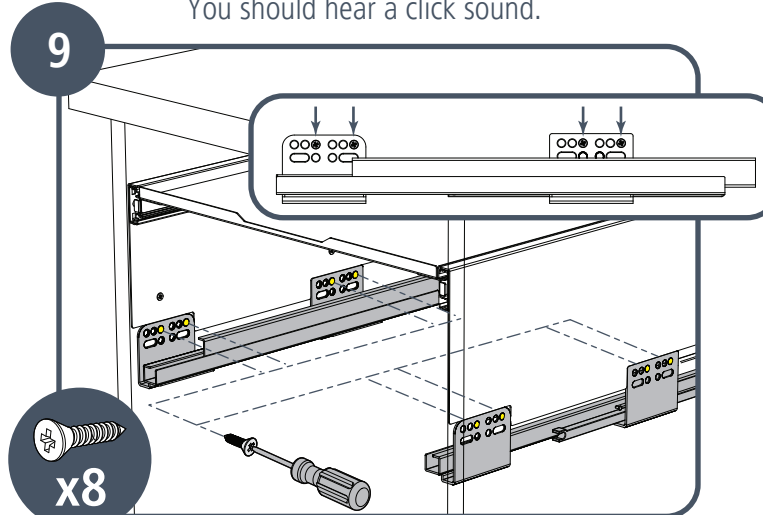


Align lower runners flush under metal plates. Drill and screw in lower runners.

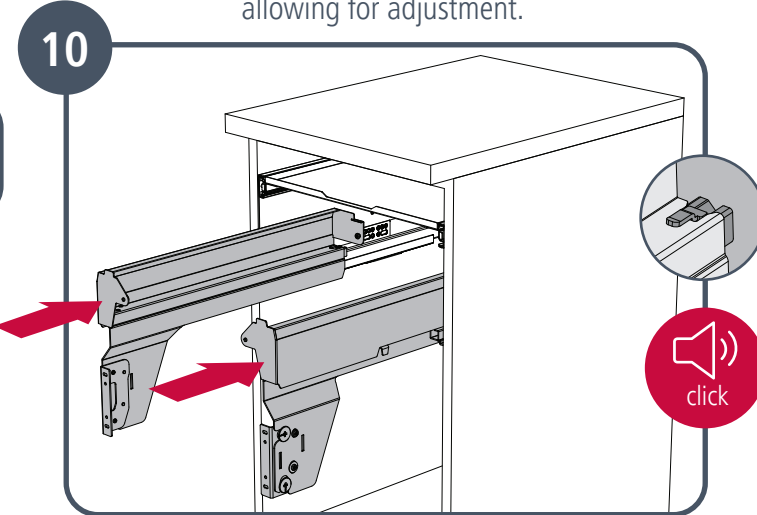


Install metal brackets. You should hear a click sound.

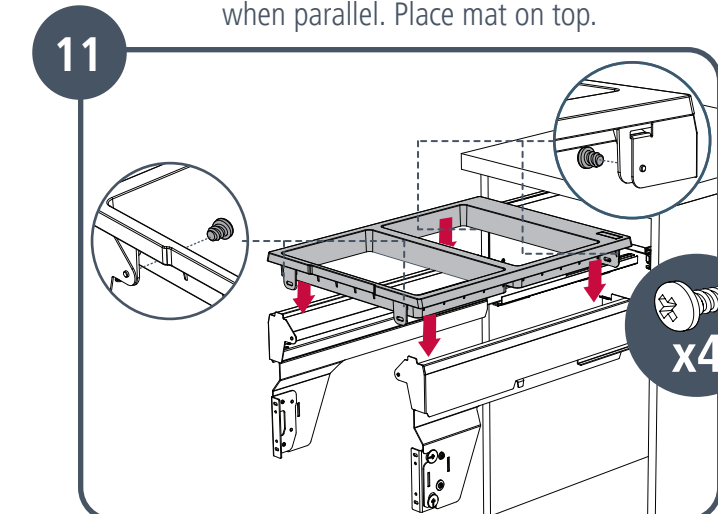


Install plastic tray loosely with screws, allowing for adjustment.

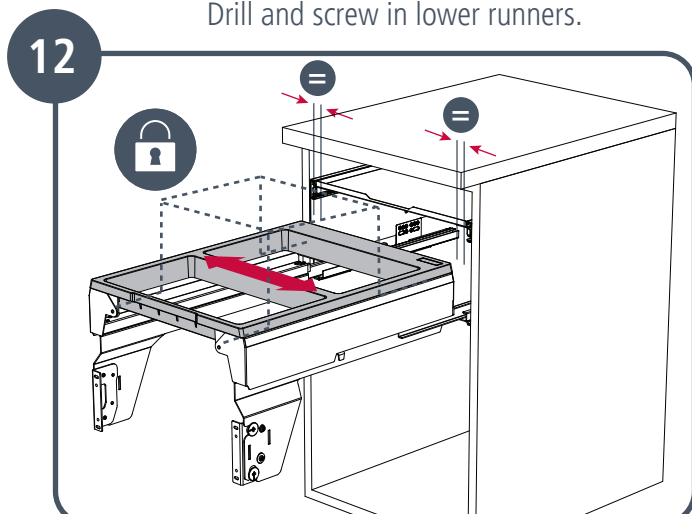


Adjust plastic tray position and tighten screws when parallel.

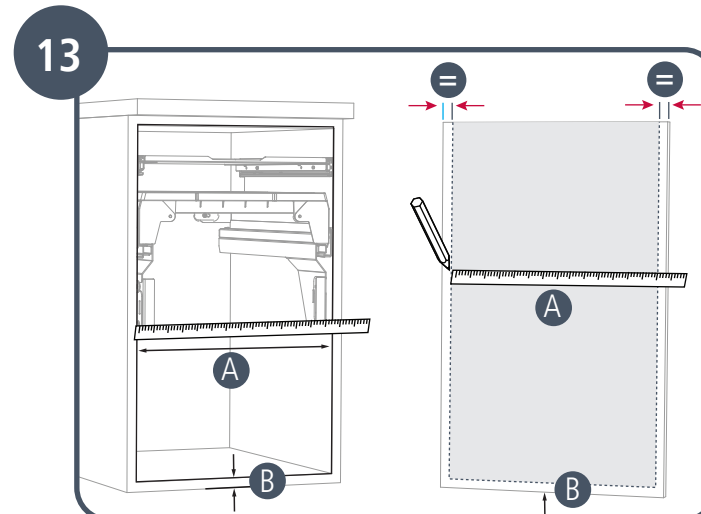


Measure and mark the cabinet bottom and side edge on the décor door.

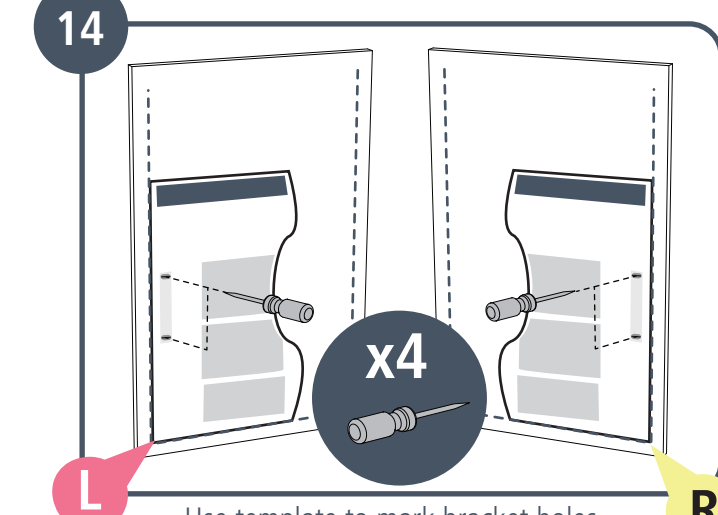


Use template to mark bracket holes on the door.

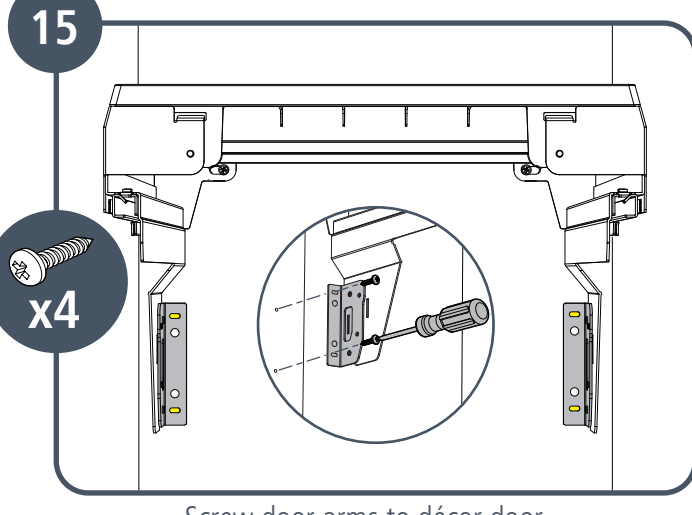


Screw door arms to décor door using the slotted holes.

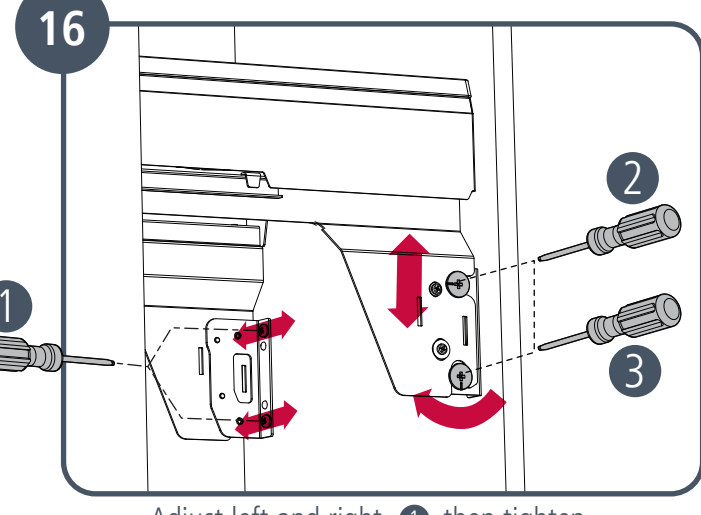


Adjust left and right 1 then tighten. Adjust vertical 2 and tilt 3

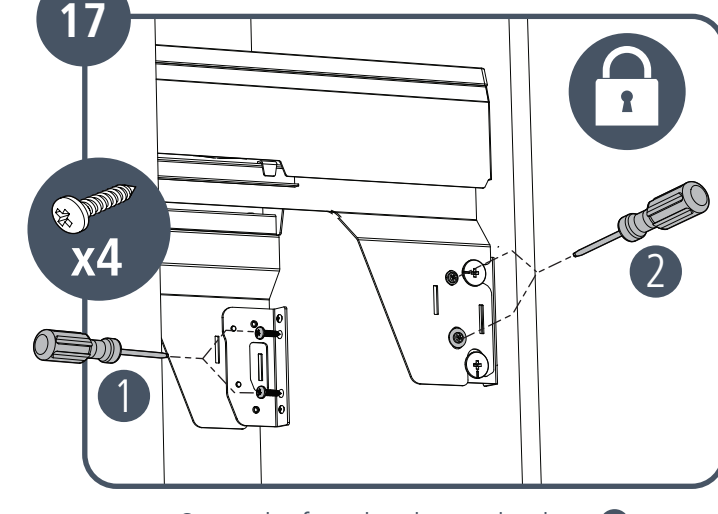


Screw the front bracket to the door 1 Lock vertical and tilt adjustment 2

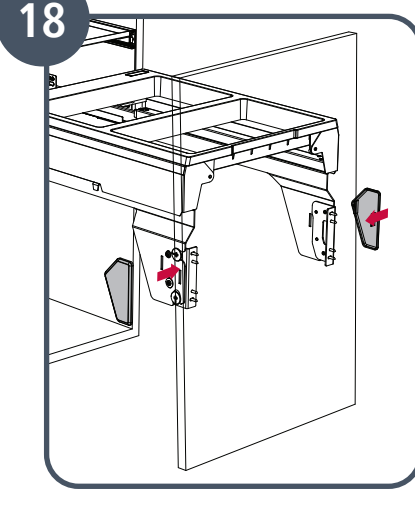

Install screw covers using clips

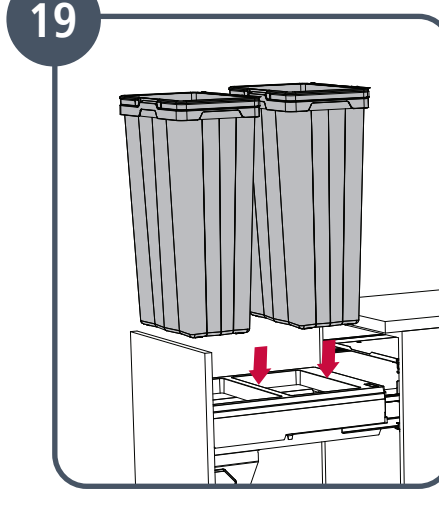

Install bins.

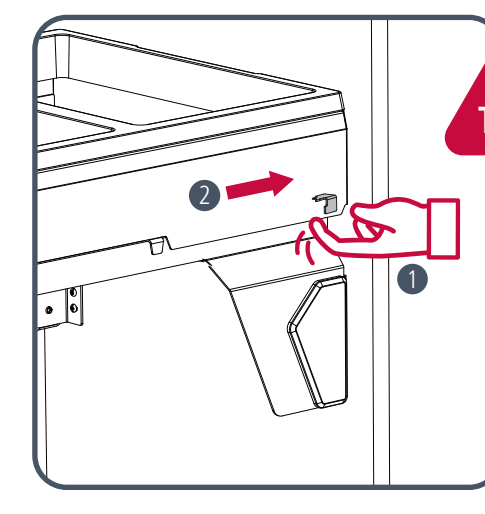

To release brackets from the runners, click switch 1 on the sides of the brackets and slide out 2

