



INSTALLATION SHEET FOR DRAWER MOUNTED BINS

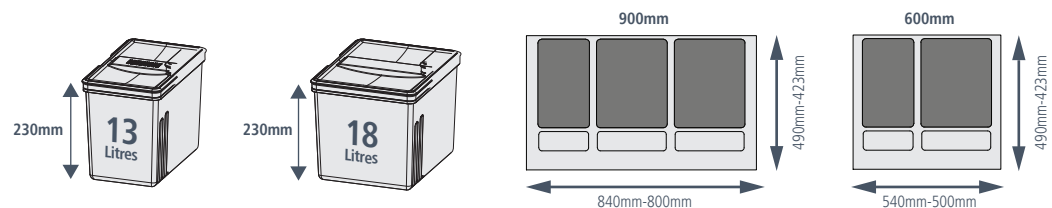


Designed to fit standard cabinet
drawer widths of 900mm and 600mm.
Runner lengths of 450mm and
500mm. Bin heights of 230mm.


5 year guarantee – see caple.co.uk
for full terms and conditions

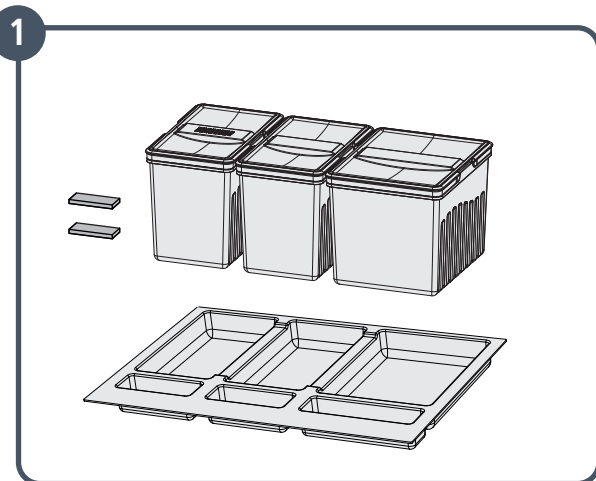


Supplied Components. Bins and tray will vary between models.

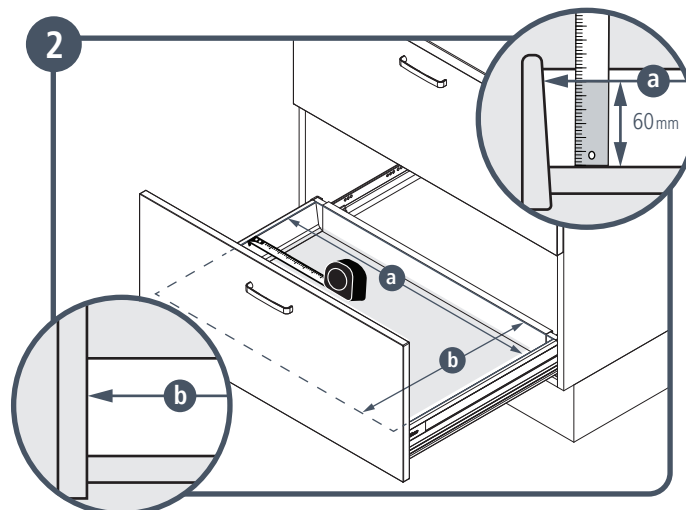


Measure 60mm up from the base of the drawer and carefully
measure the inside width **a** and measure the inside drawer depth **b**.

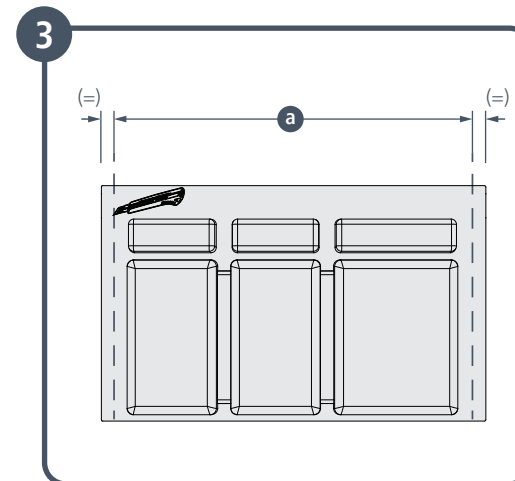


Carefully trim the tray width according to the
measurement **a**.

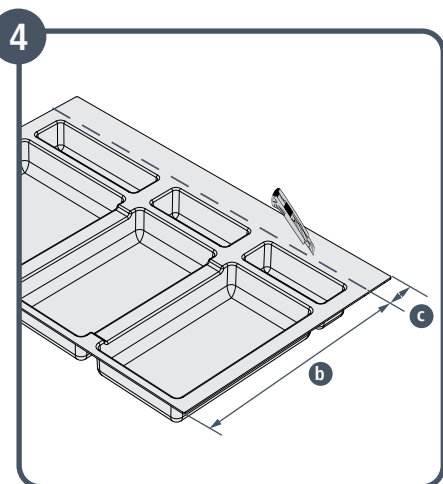


Carefully trim the tray depth according to the
measurement **b**. Trim from the back edge **c** as needed.

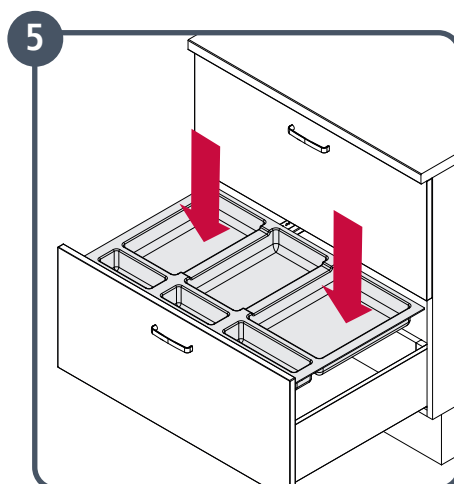

Install tray into the drawer

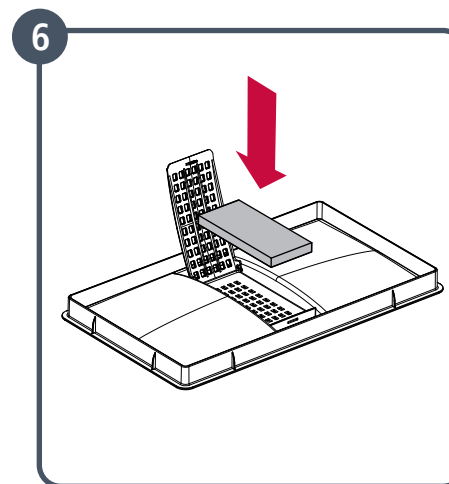

Open the flap on the underside of the bin lid and install
the filter. Replace filter every 1-2 months as needed.

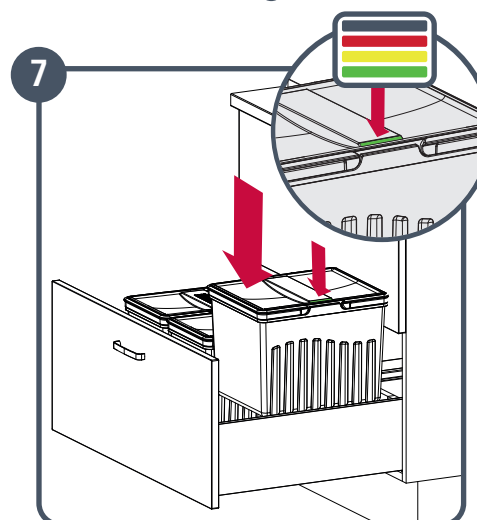

Install bins and attach coloured sticker for identification.