


RFF730

REVERSING THE DOOR

1. Hold the top hinge cover and remove it toward that direction. *[Figure 1]*

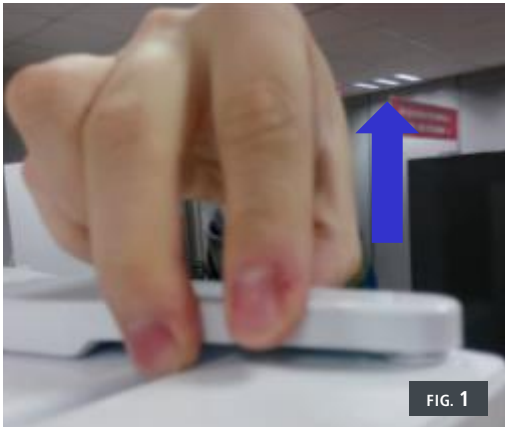

2. Disconnect the display connector. Unscrew the screws fixing the top hinge and remove it. *[Figure 2]*



3. Displace the top door *[Figure 3]*



4. Unscrew the two screws fixing the middle hinge and remove it. *[Figure 4]*



RFF730

REVERSING THE DOOR

5. Displace the bottom door. [Figure 5]



6. Unscrew the adjustable foot. [Figure 6]



7. Unscrew the bottom hinge screws. [Figure 7]




8. Unscrew the bottom hinge pin and screw it to other hole. [Figure 8]



RFF730

REVERSING THE DOOR

9. Screw the bottom hinge to the left bottom side of refrigerator. Screw the adjustable foot there. [Figure 9]

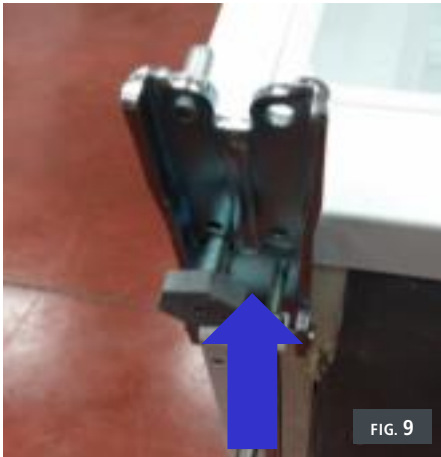

10. Unscrew the two screws fixing stopper and stopper support plate under the cooler door. After that screw the other side. [Figure 10]



11. Replace the top bushing and the top bushing cap at the bottom door. [Figure 11]




RFF730

REVERSING THE DOOR

12. Remove the support plastic and then metal stopper placed under the upper door. [Figure 12] Then re screw these parts to the other side symmetrically. [Remember the screw for the metal part must be screwed to the hole which is closer to the bushing]. Do not use cordless screwdriver for these screws.



13. Remove the hinge cover on the top panel and replace to other side. [Figure 13]

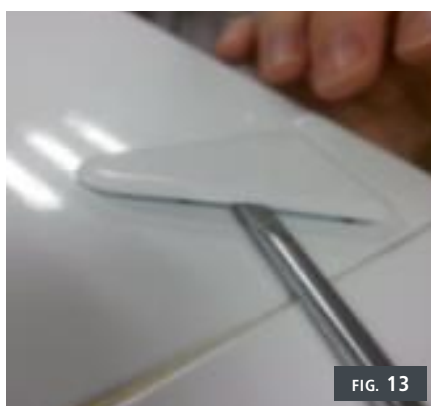

14. Remove the middle hinge cover and then screw the screw on the side panel [Figure 14.1] and assemble to the right side panel [Figure 14.2]




RFF730

REVERSING THE DOOR

15. Place the bottom door [Figure 15.1] and rotate the middle hinge by 180°. After that, Screw to the right side on the middle sheet. [Figure 15.2]



16. Remove the socket cover-right of the top door [Figure 16.1] Remove the display socket [Figure 16.2] Please use the socket cover to hidden other housing [Figure 16.3 / Figure 16.4]

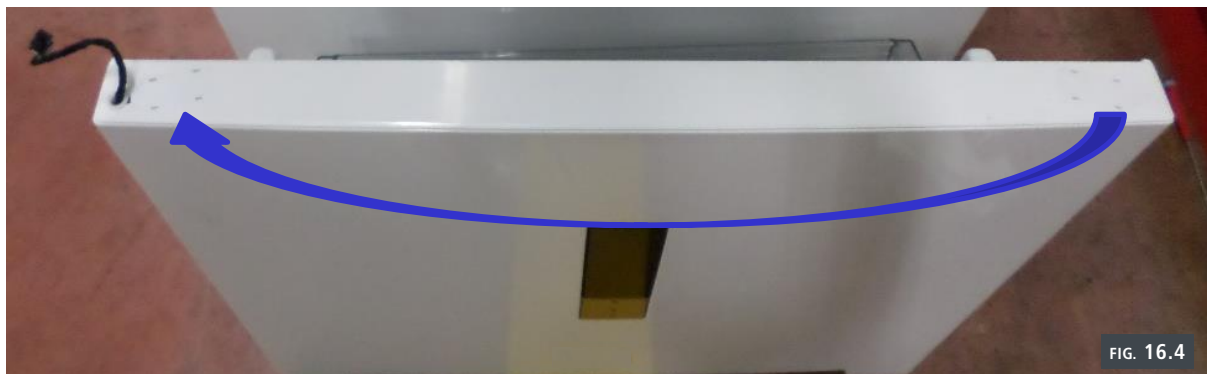

RFF730

REVERSING THE DOOR

17. Place the top door to the middle hinge and then connect the display connector and screw the top hinge to the top panel. *[Figure 17]*



18. Place the top hinge cover. *[Figure 18]*

